

1963 RAMBLER AMBASSADOR & CLASSIC

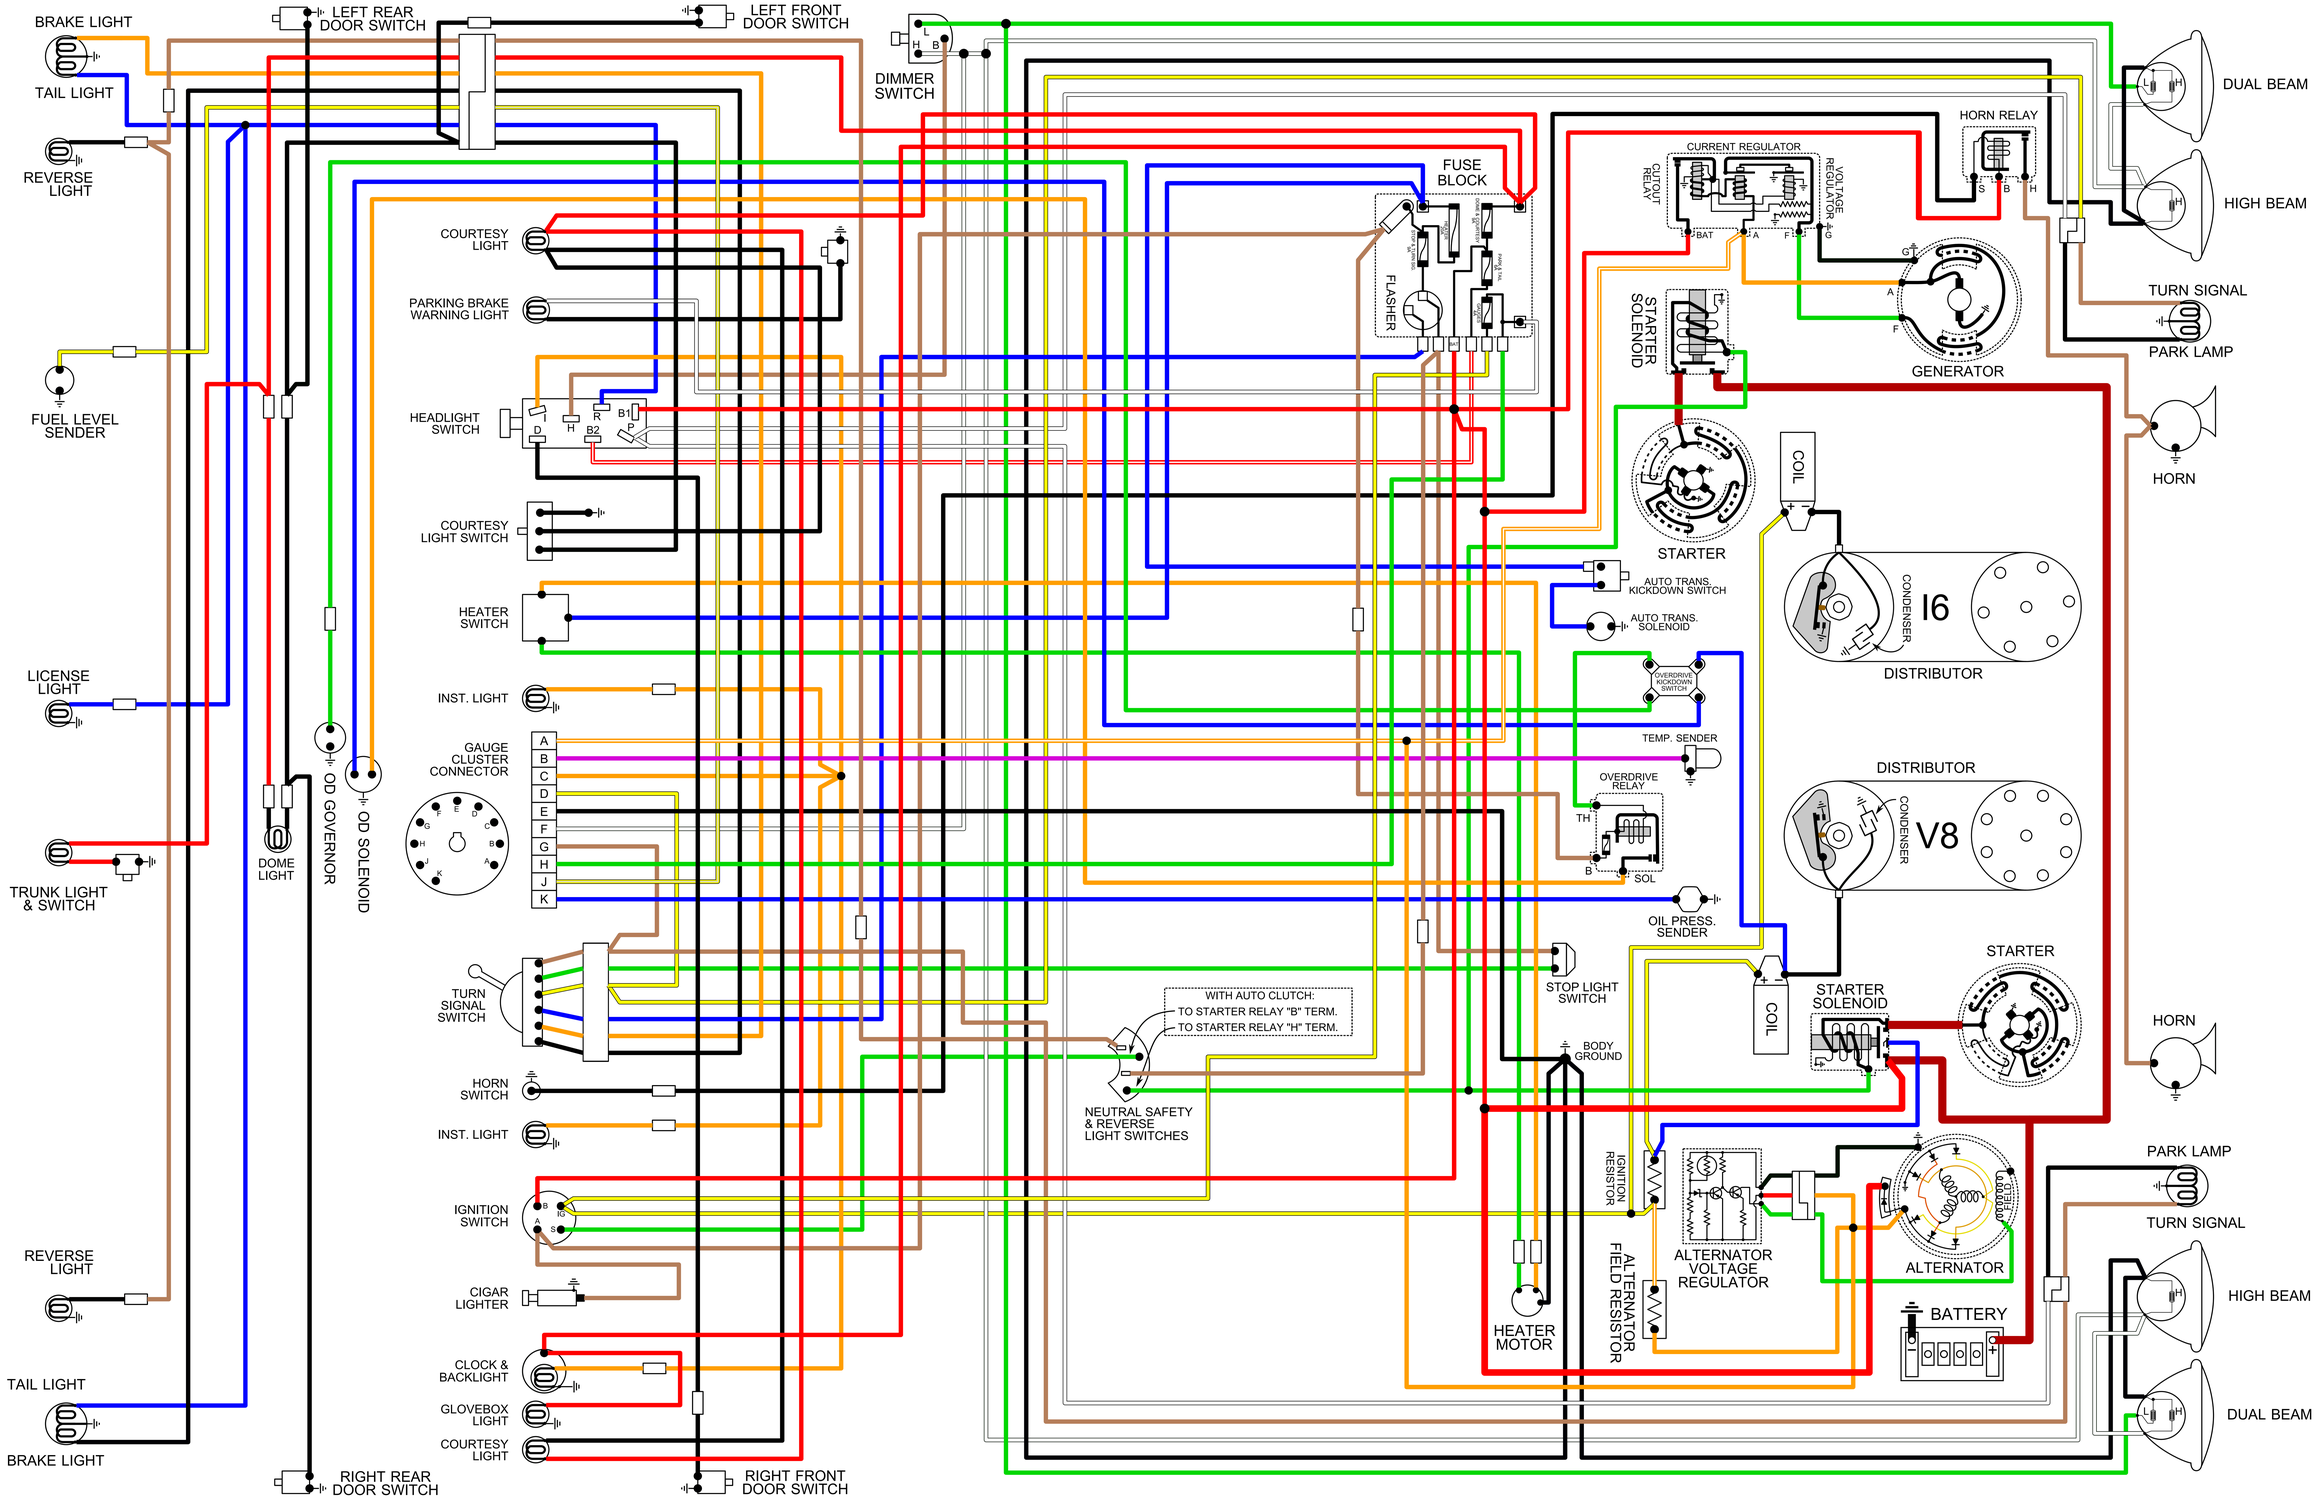

CINCO

1963 RAMBLER AMBASSADOR & CLASSIC


MAIN POWER

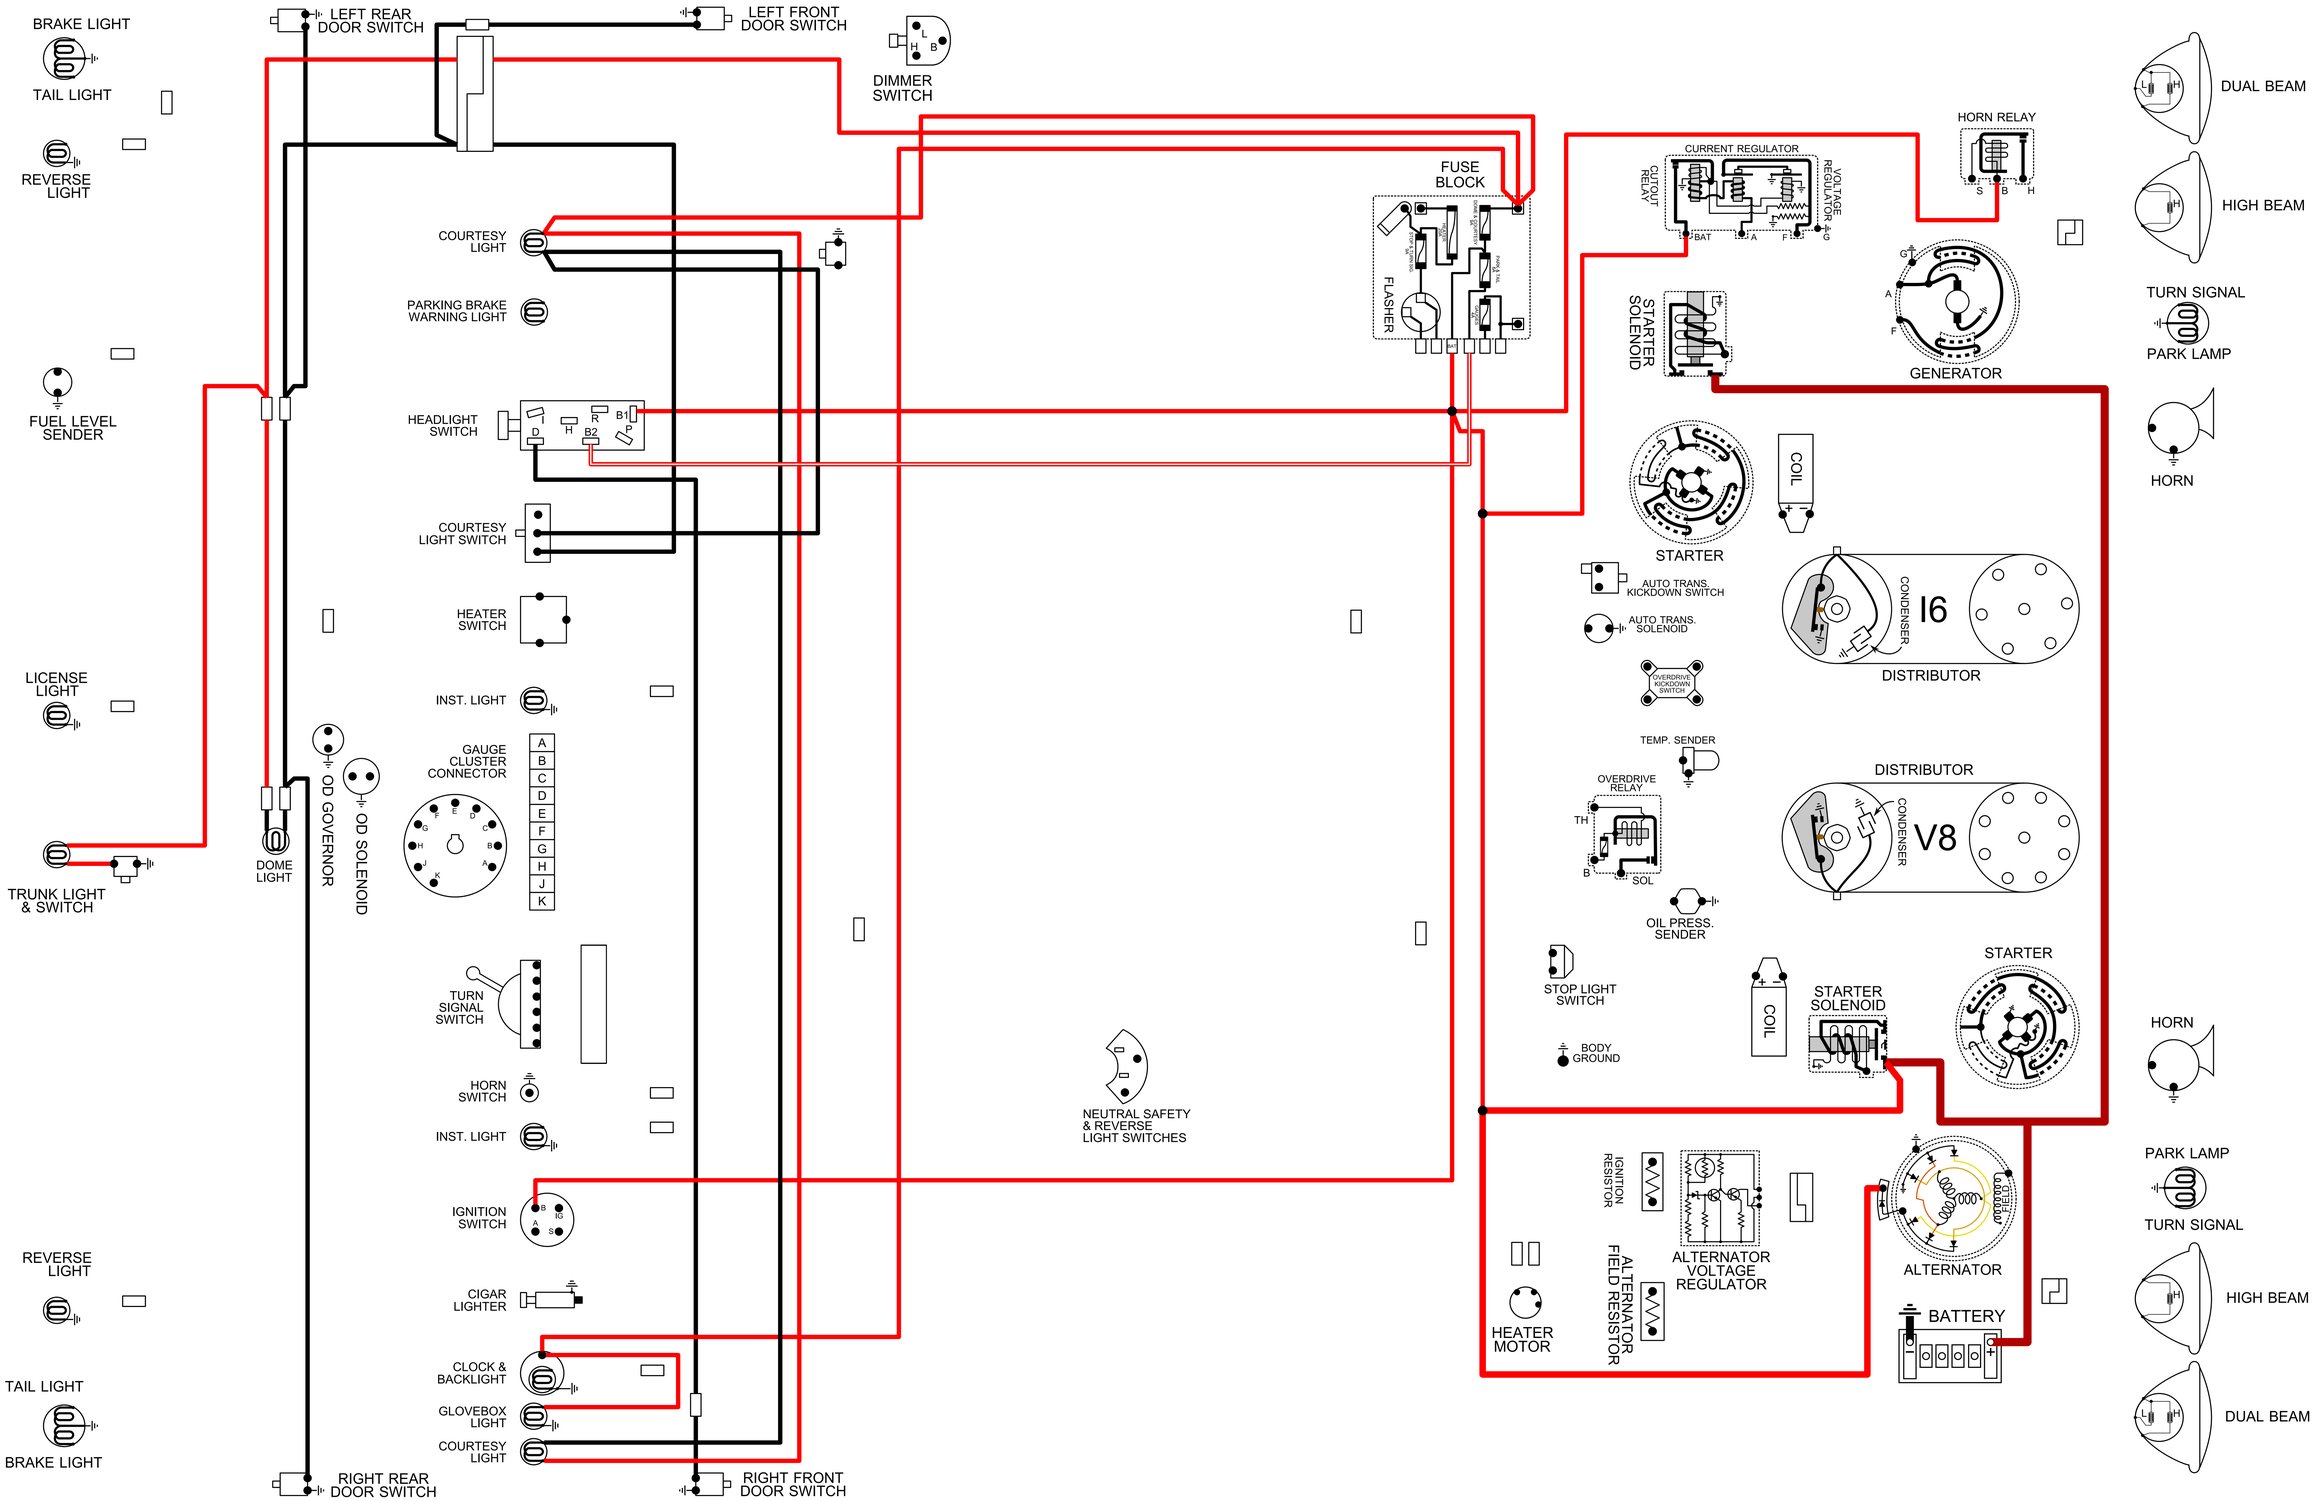

CINCO


1963 RAMBLER AMBASSADOR & CLASSIC

ACCESSORY POWER

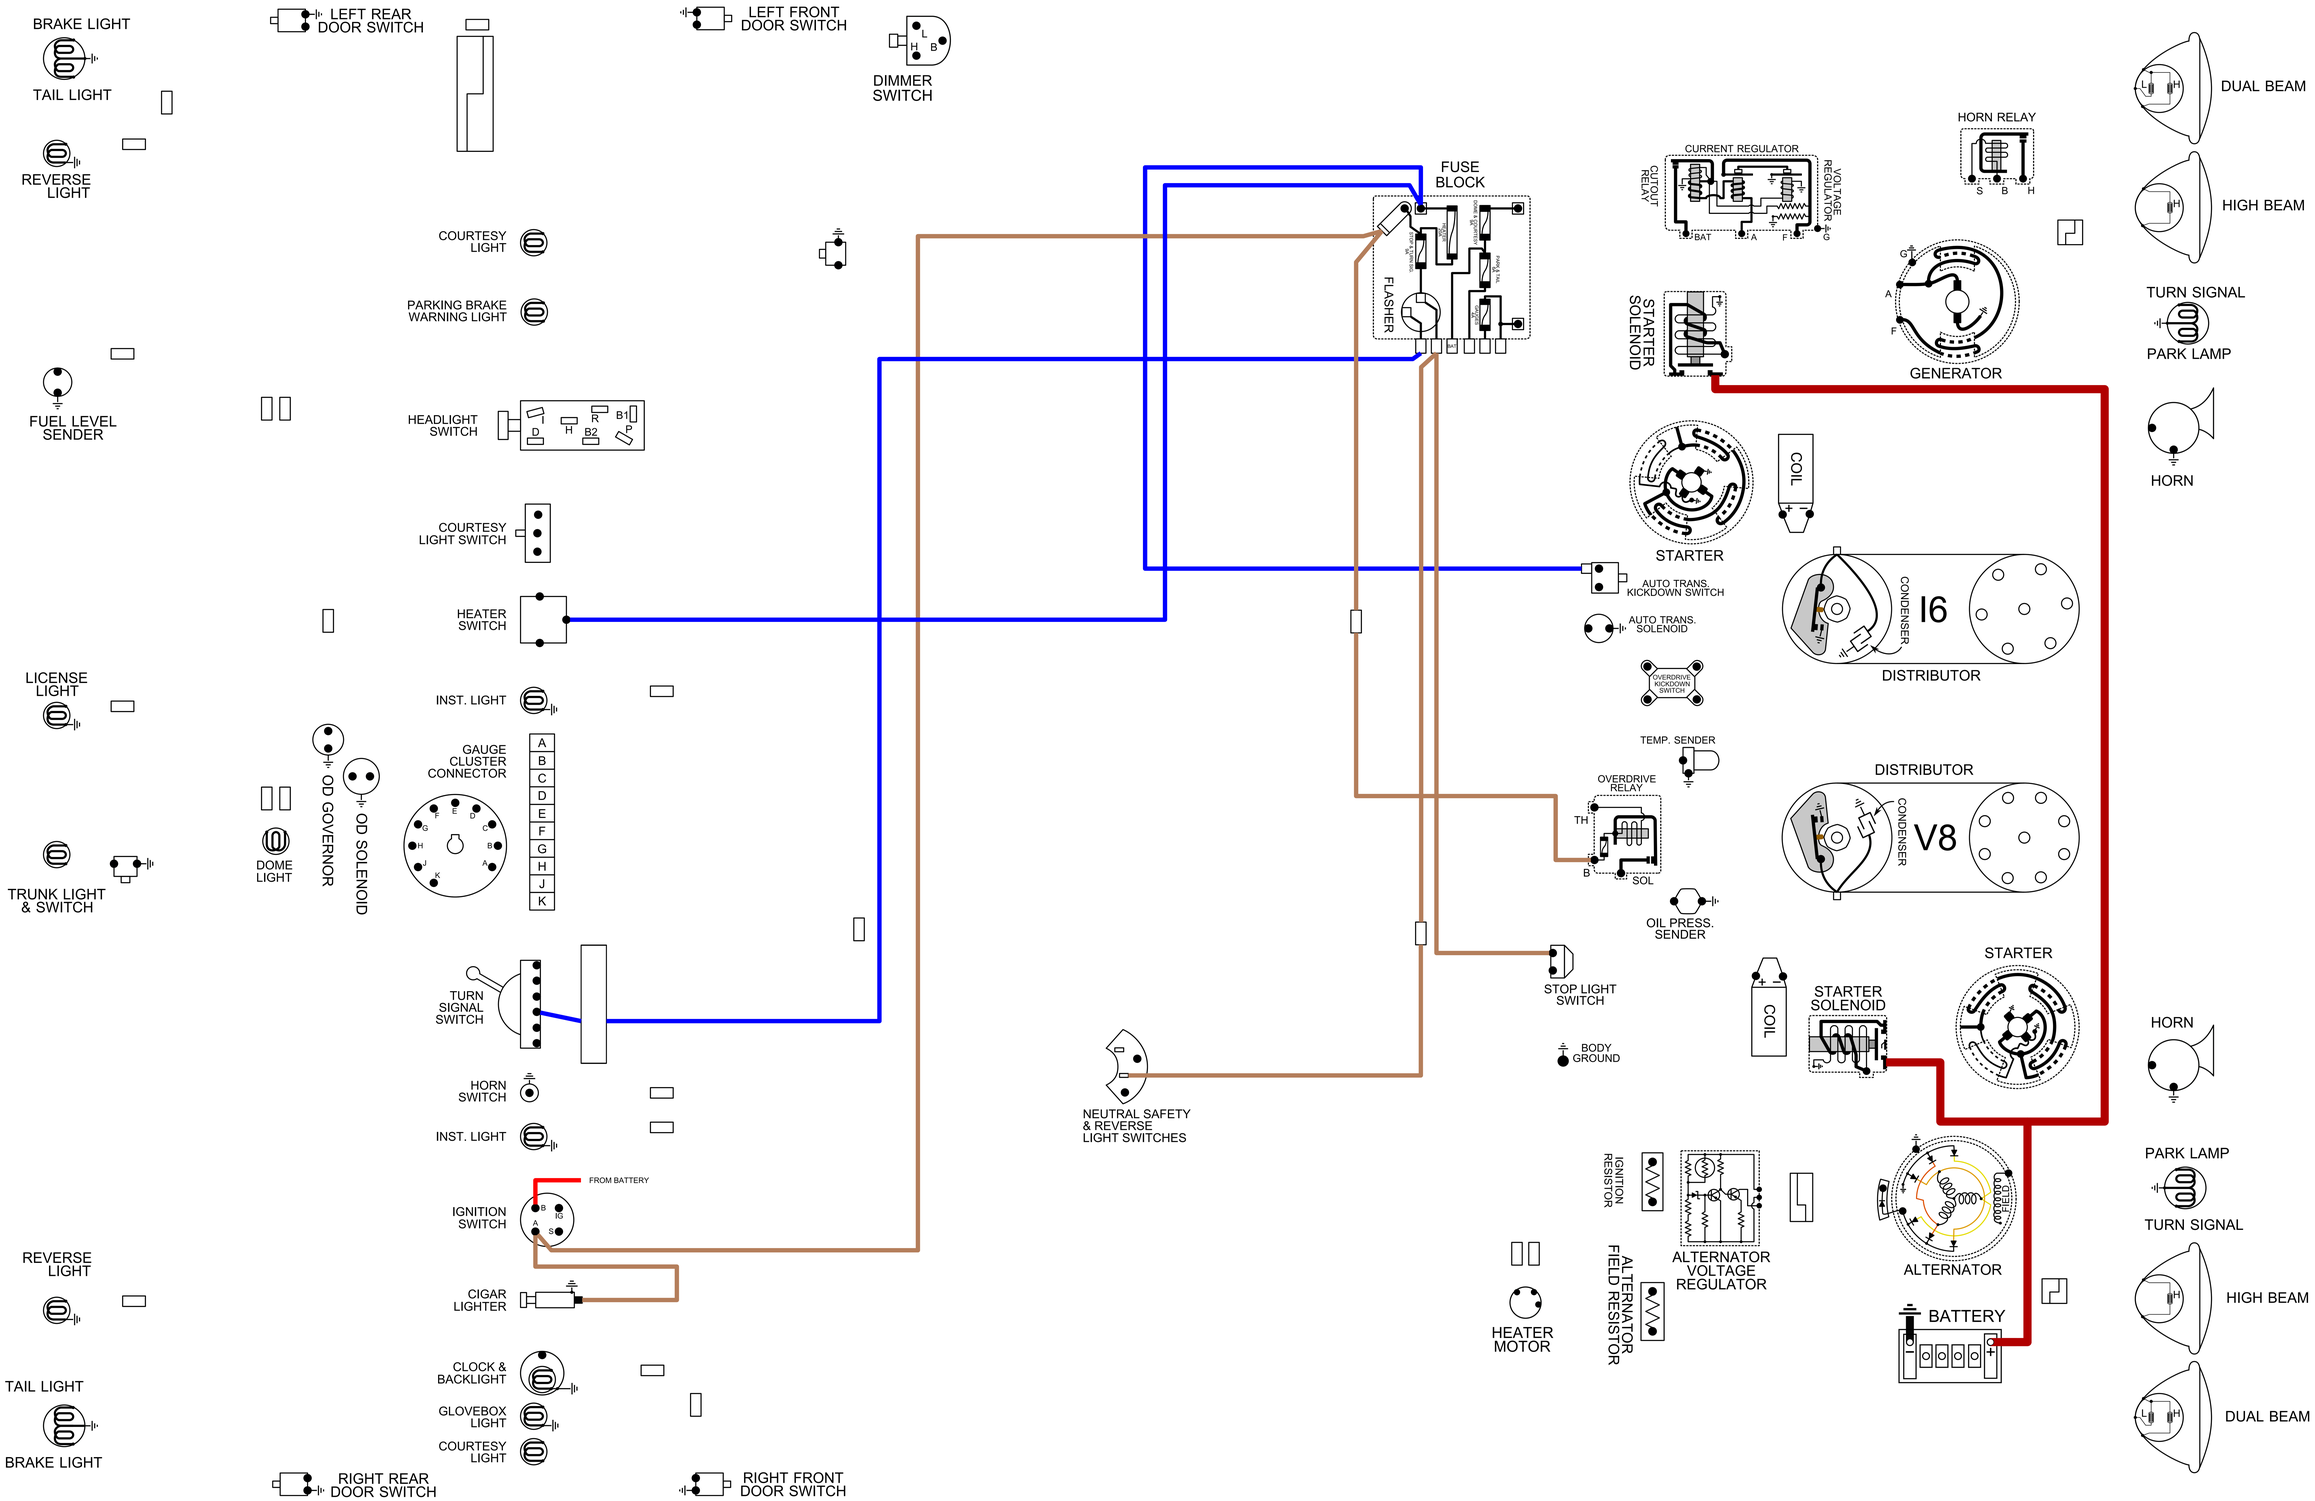


CINCO

1963 RAMBLER AMBASSADOR & CLASSIC
IGNITION SYSTEM

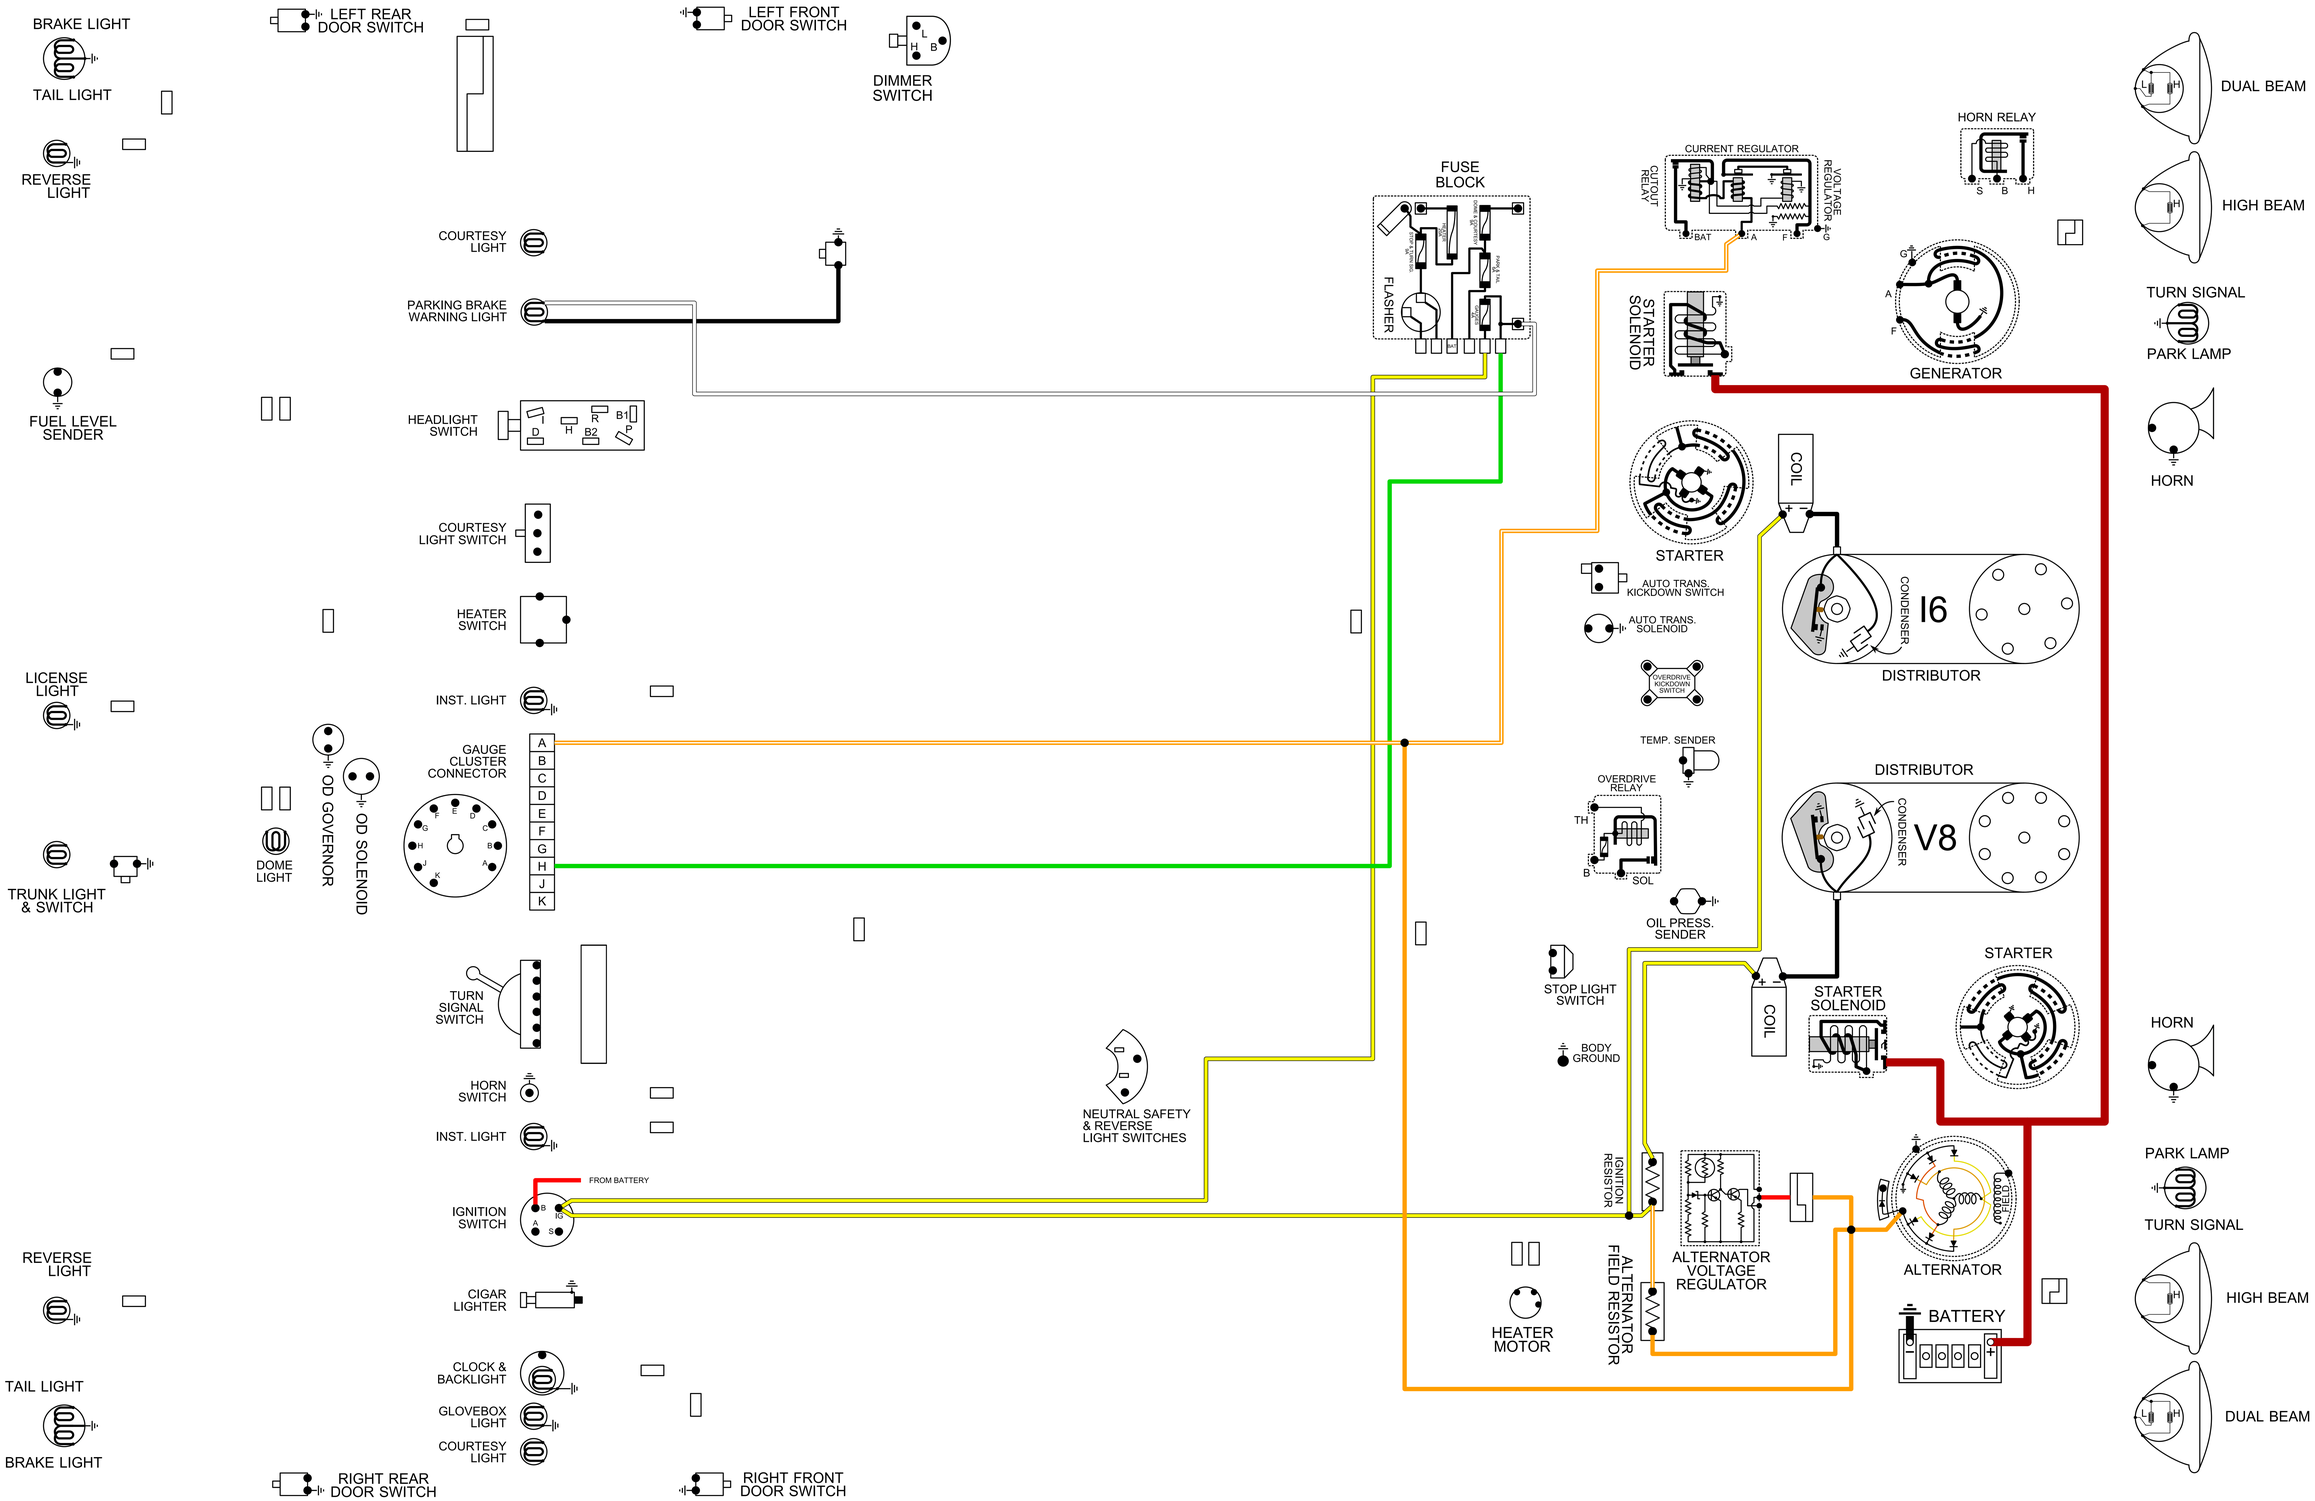


CINCO

1963 RAMBLER AMBASSADOR & CLASSIC
STARTING SYSTEM

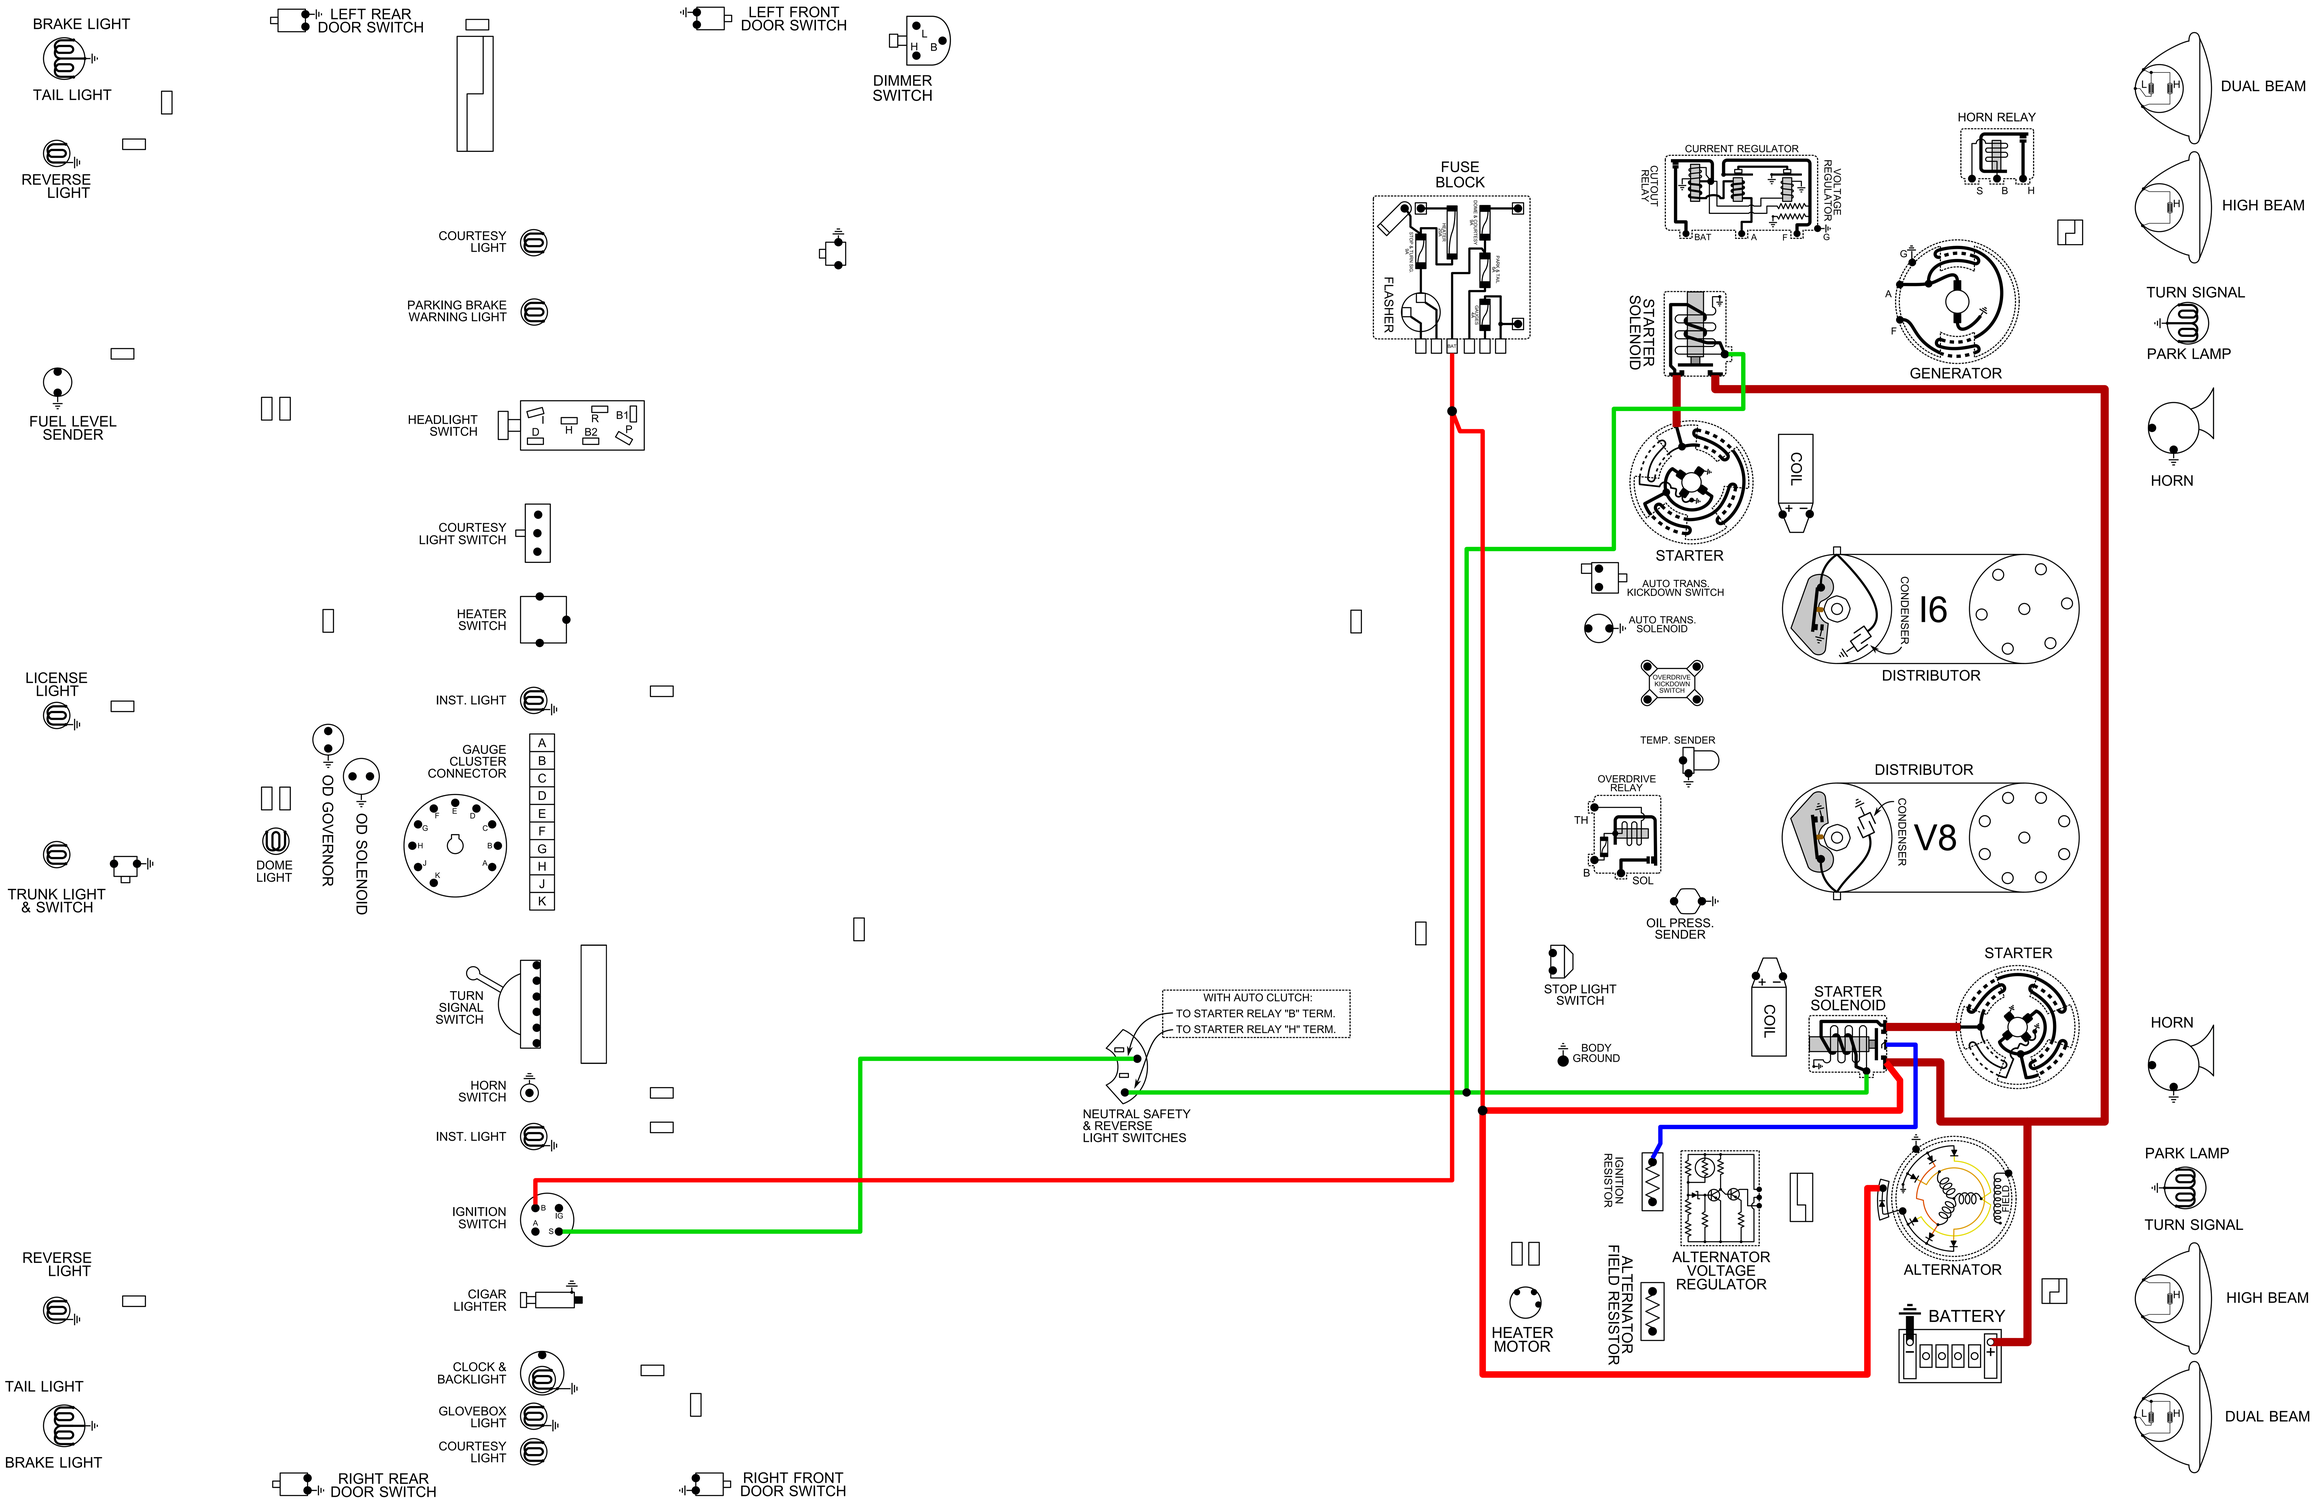


1963 RAMBLER AMBASSADOR & CLASSIC
CHARGING SYSTEM

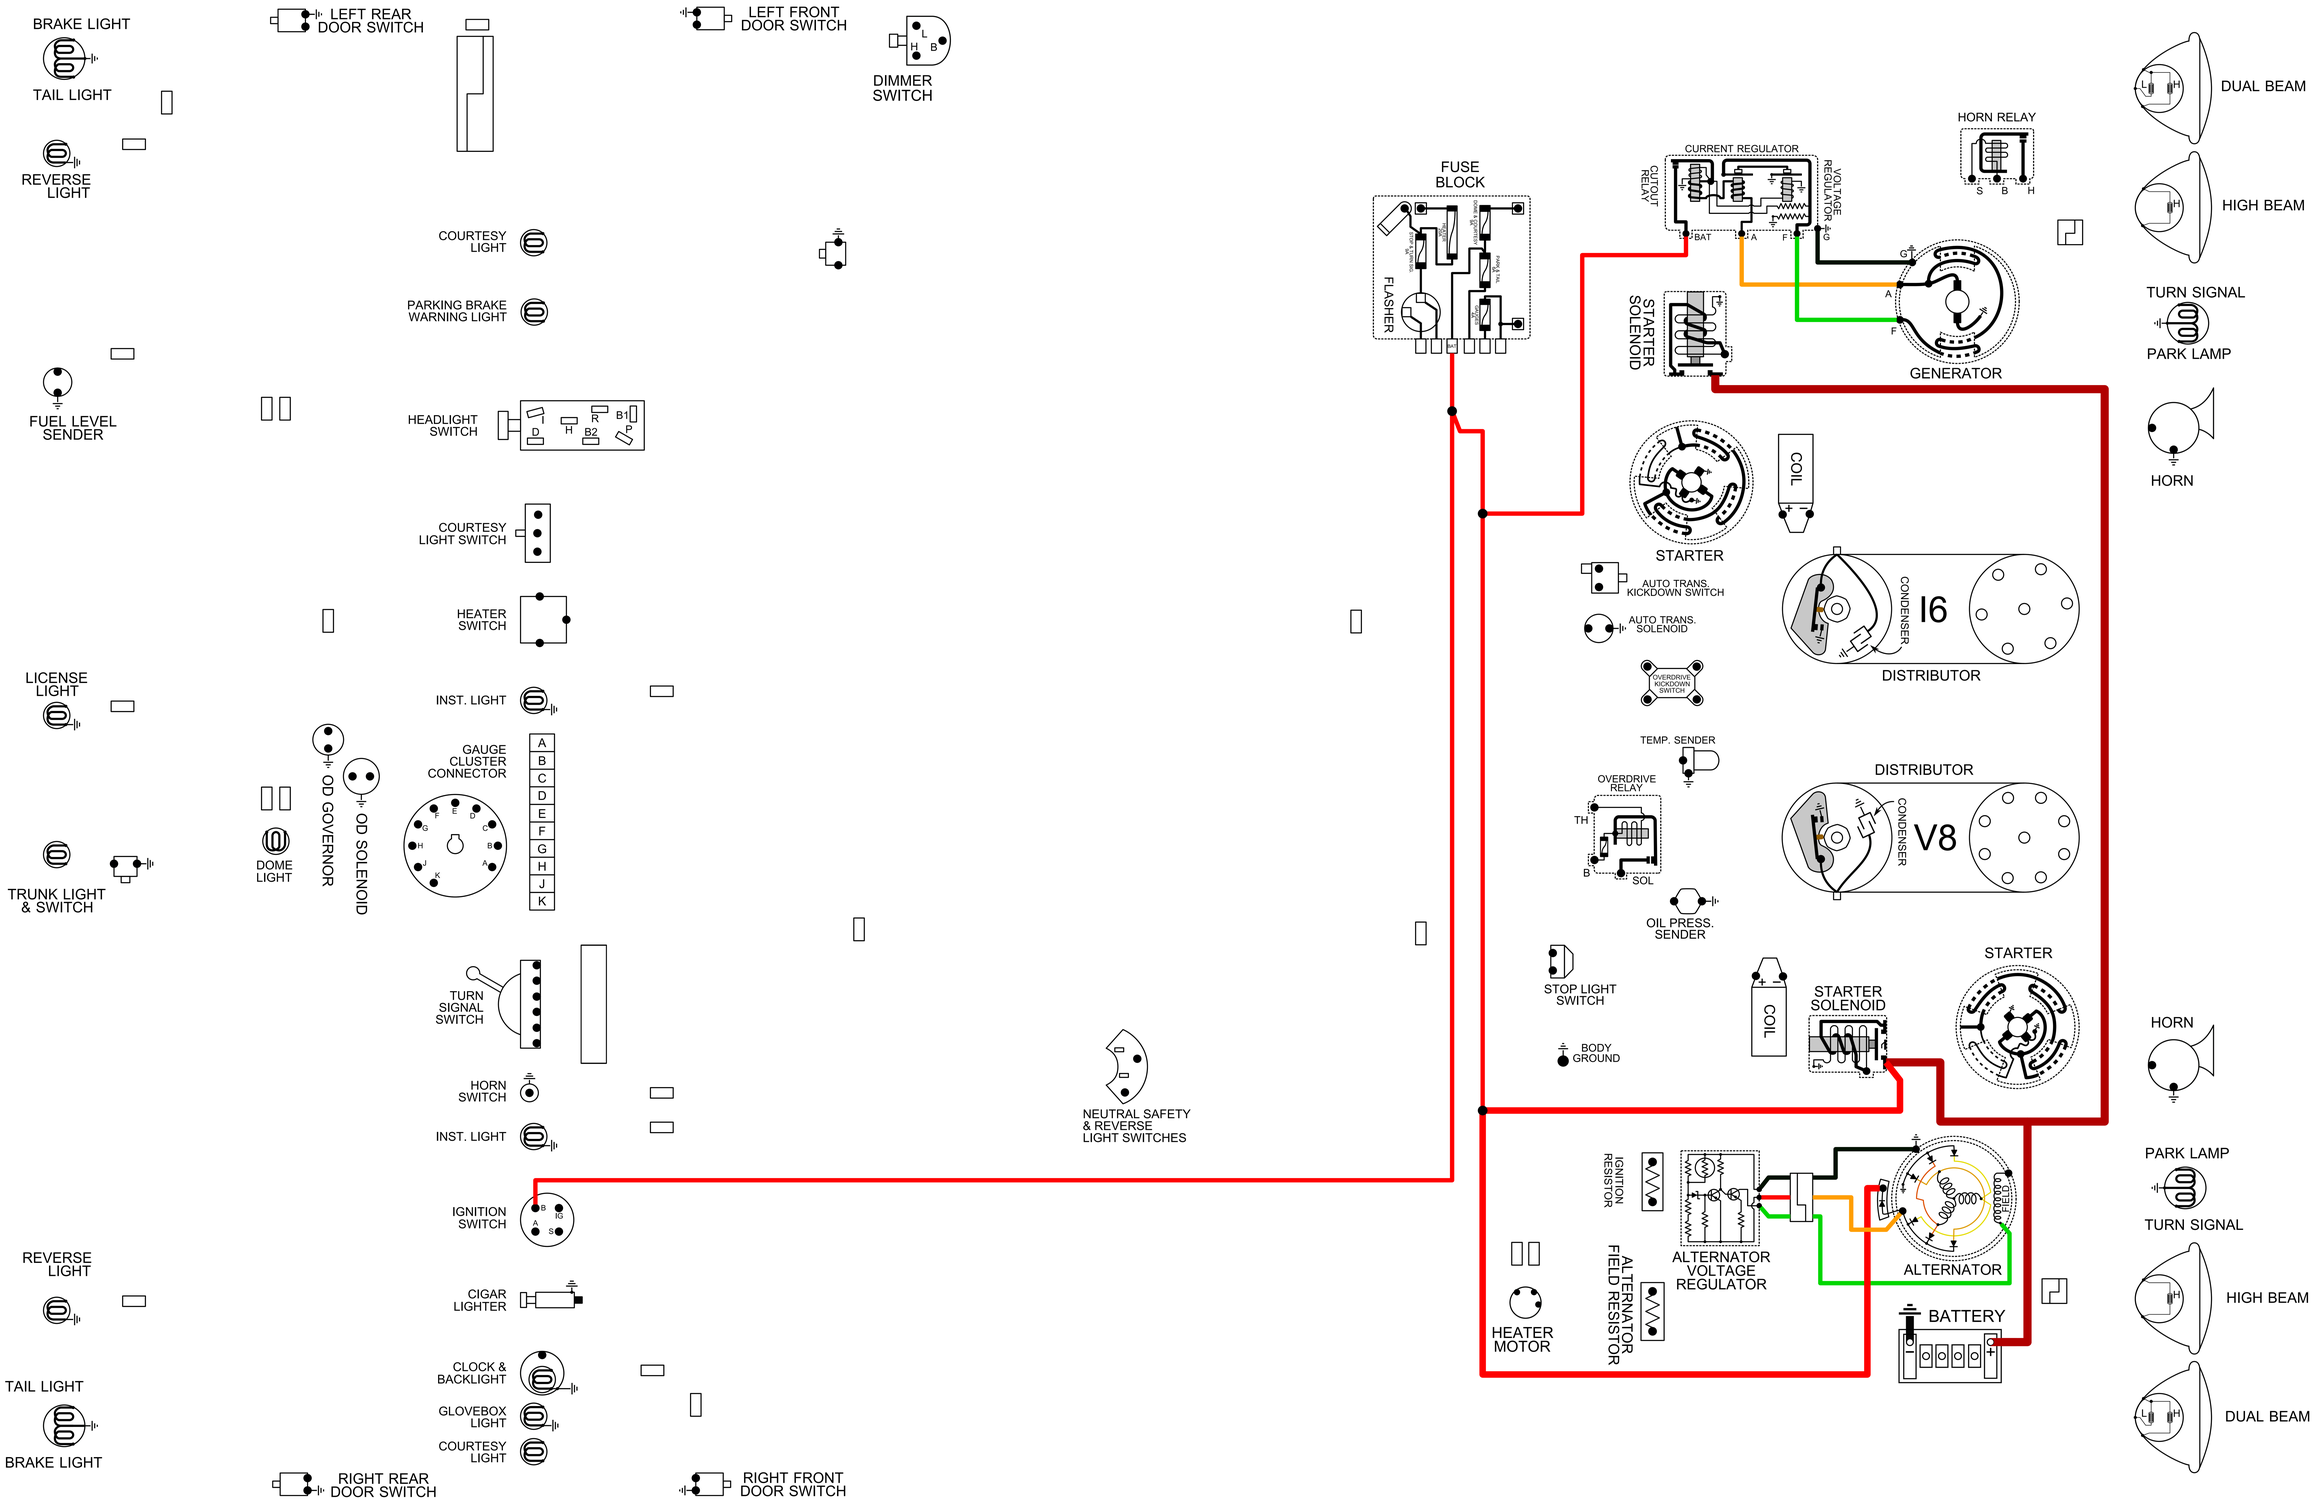

CINCO

1963 RAMBLER AMBASSADOR & CLASSIC


HEADLIGHTS

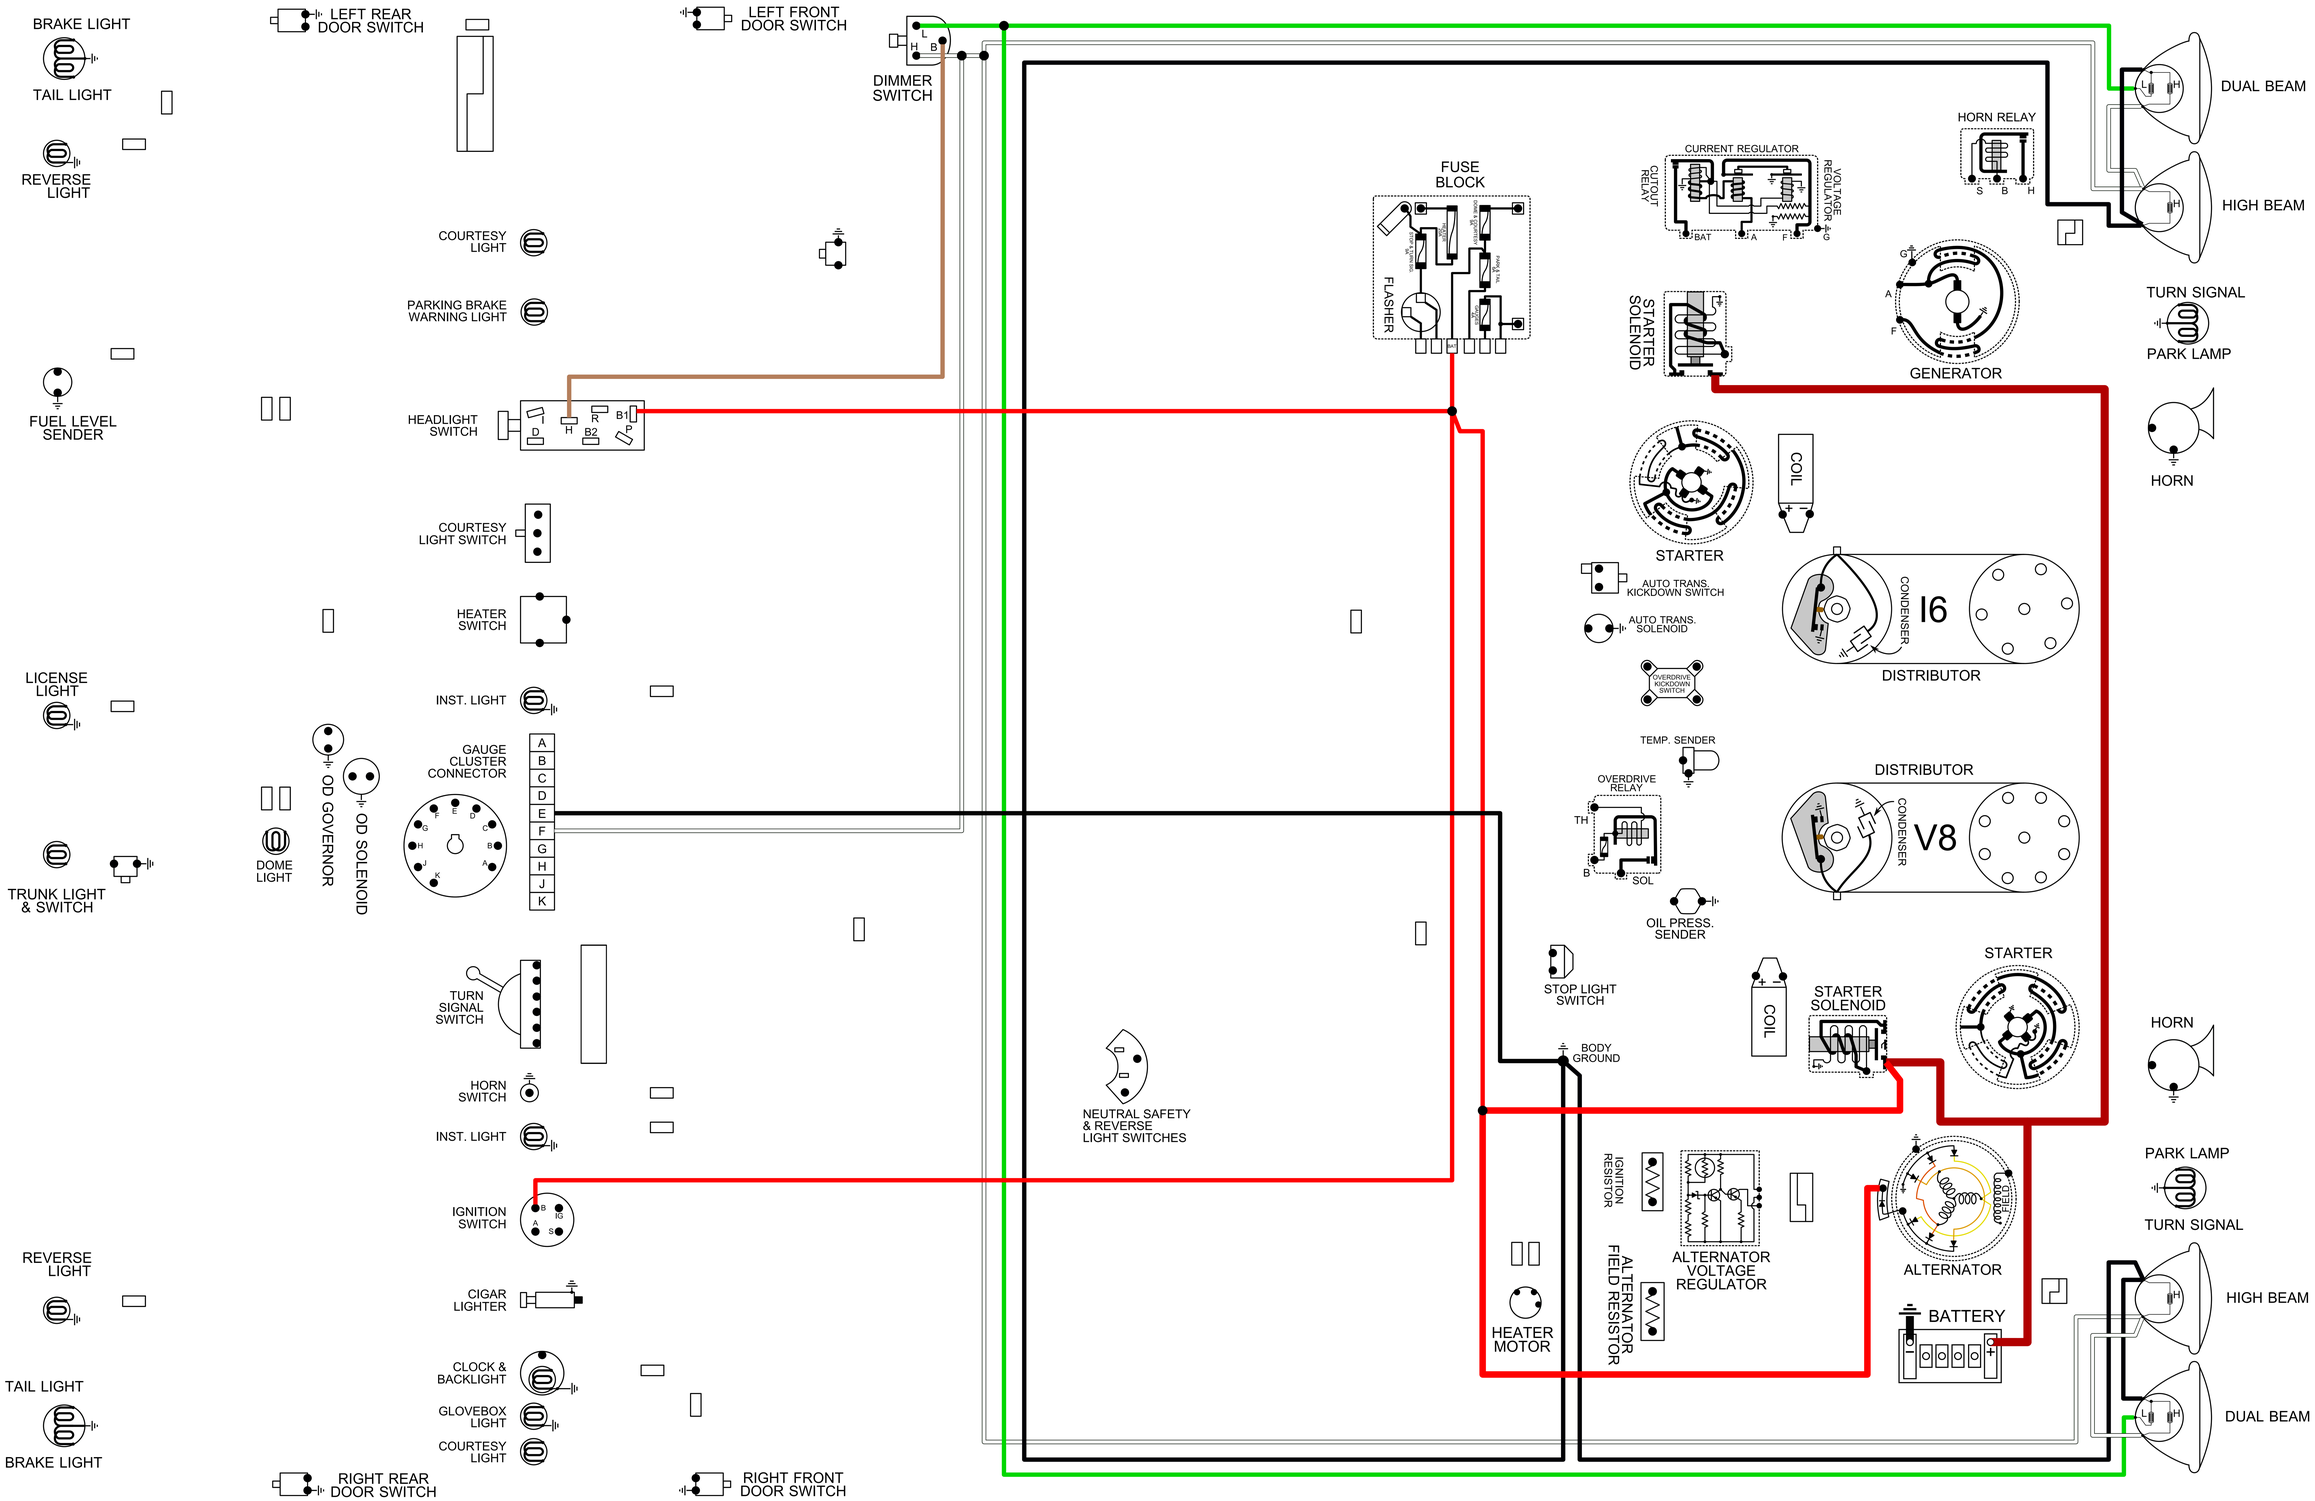

CINCO

1963 RAMBLER AMBASSADOR & CLASSIC


RUNNING LIGHTS

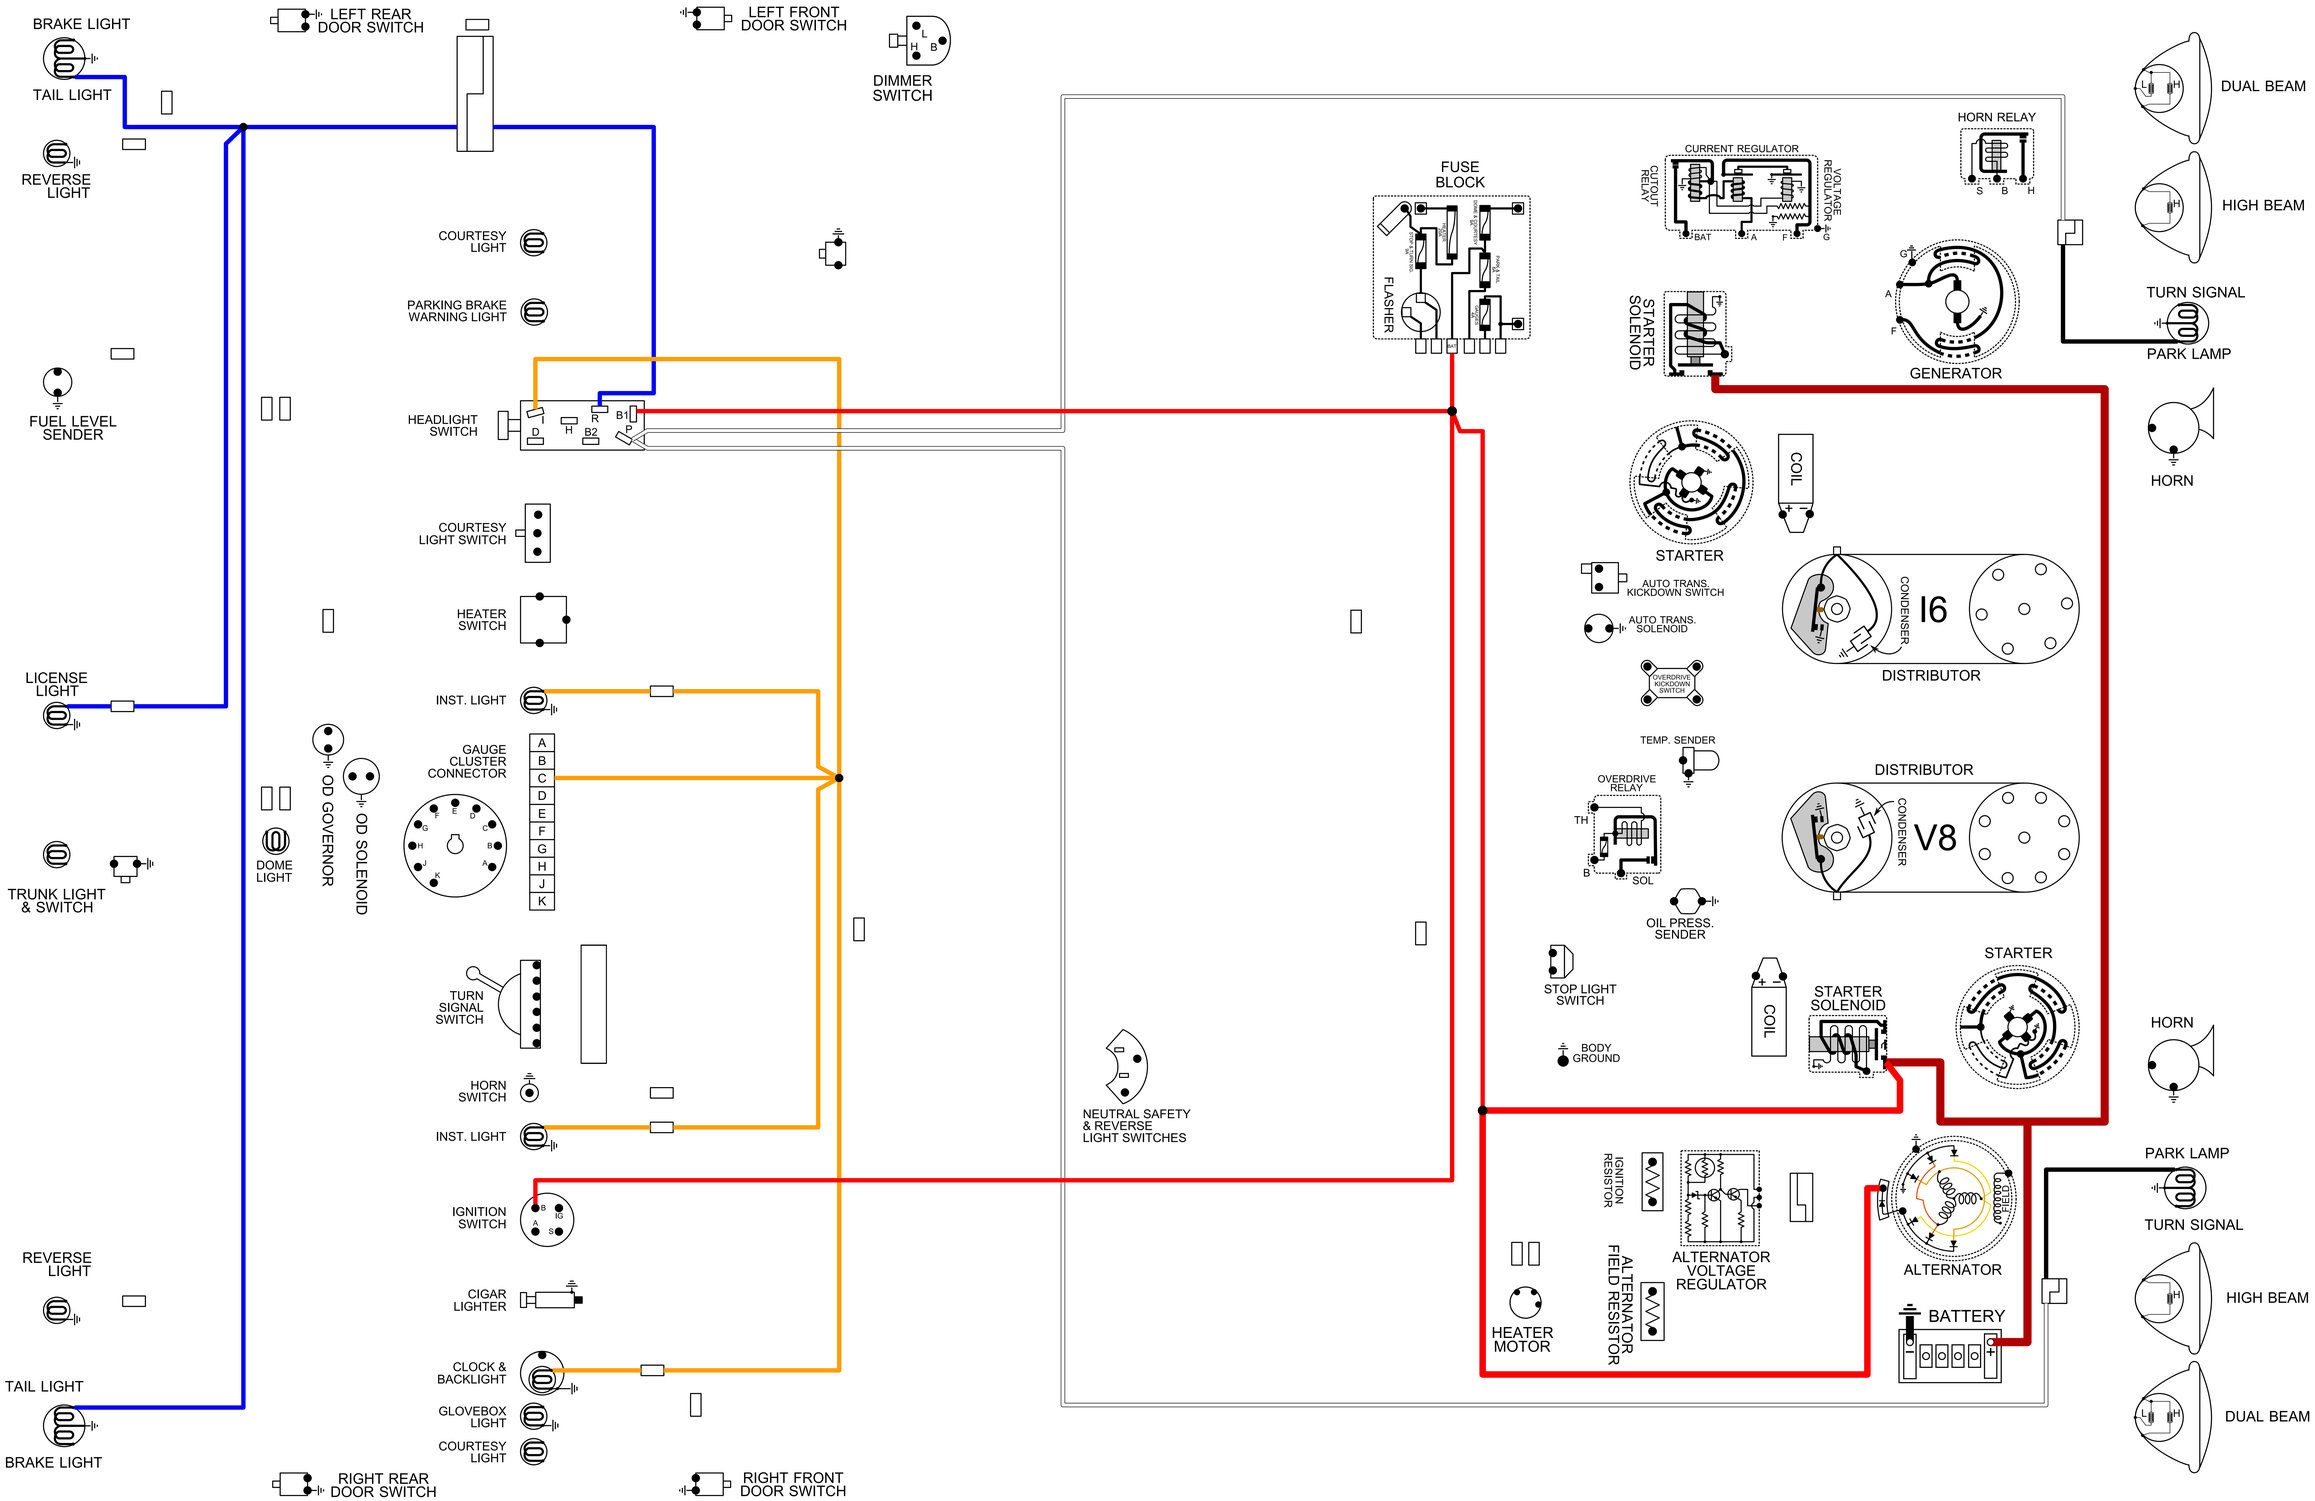

CINCO

1963 RAMBLER AMBASSADOR & CLASSIC


BRAKE LIGHTS

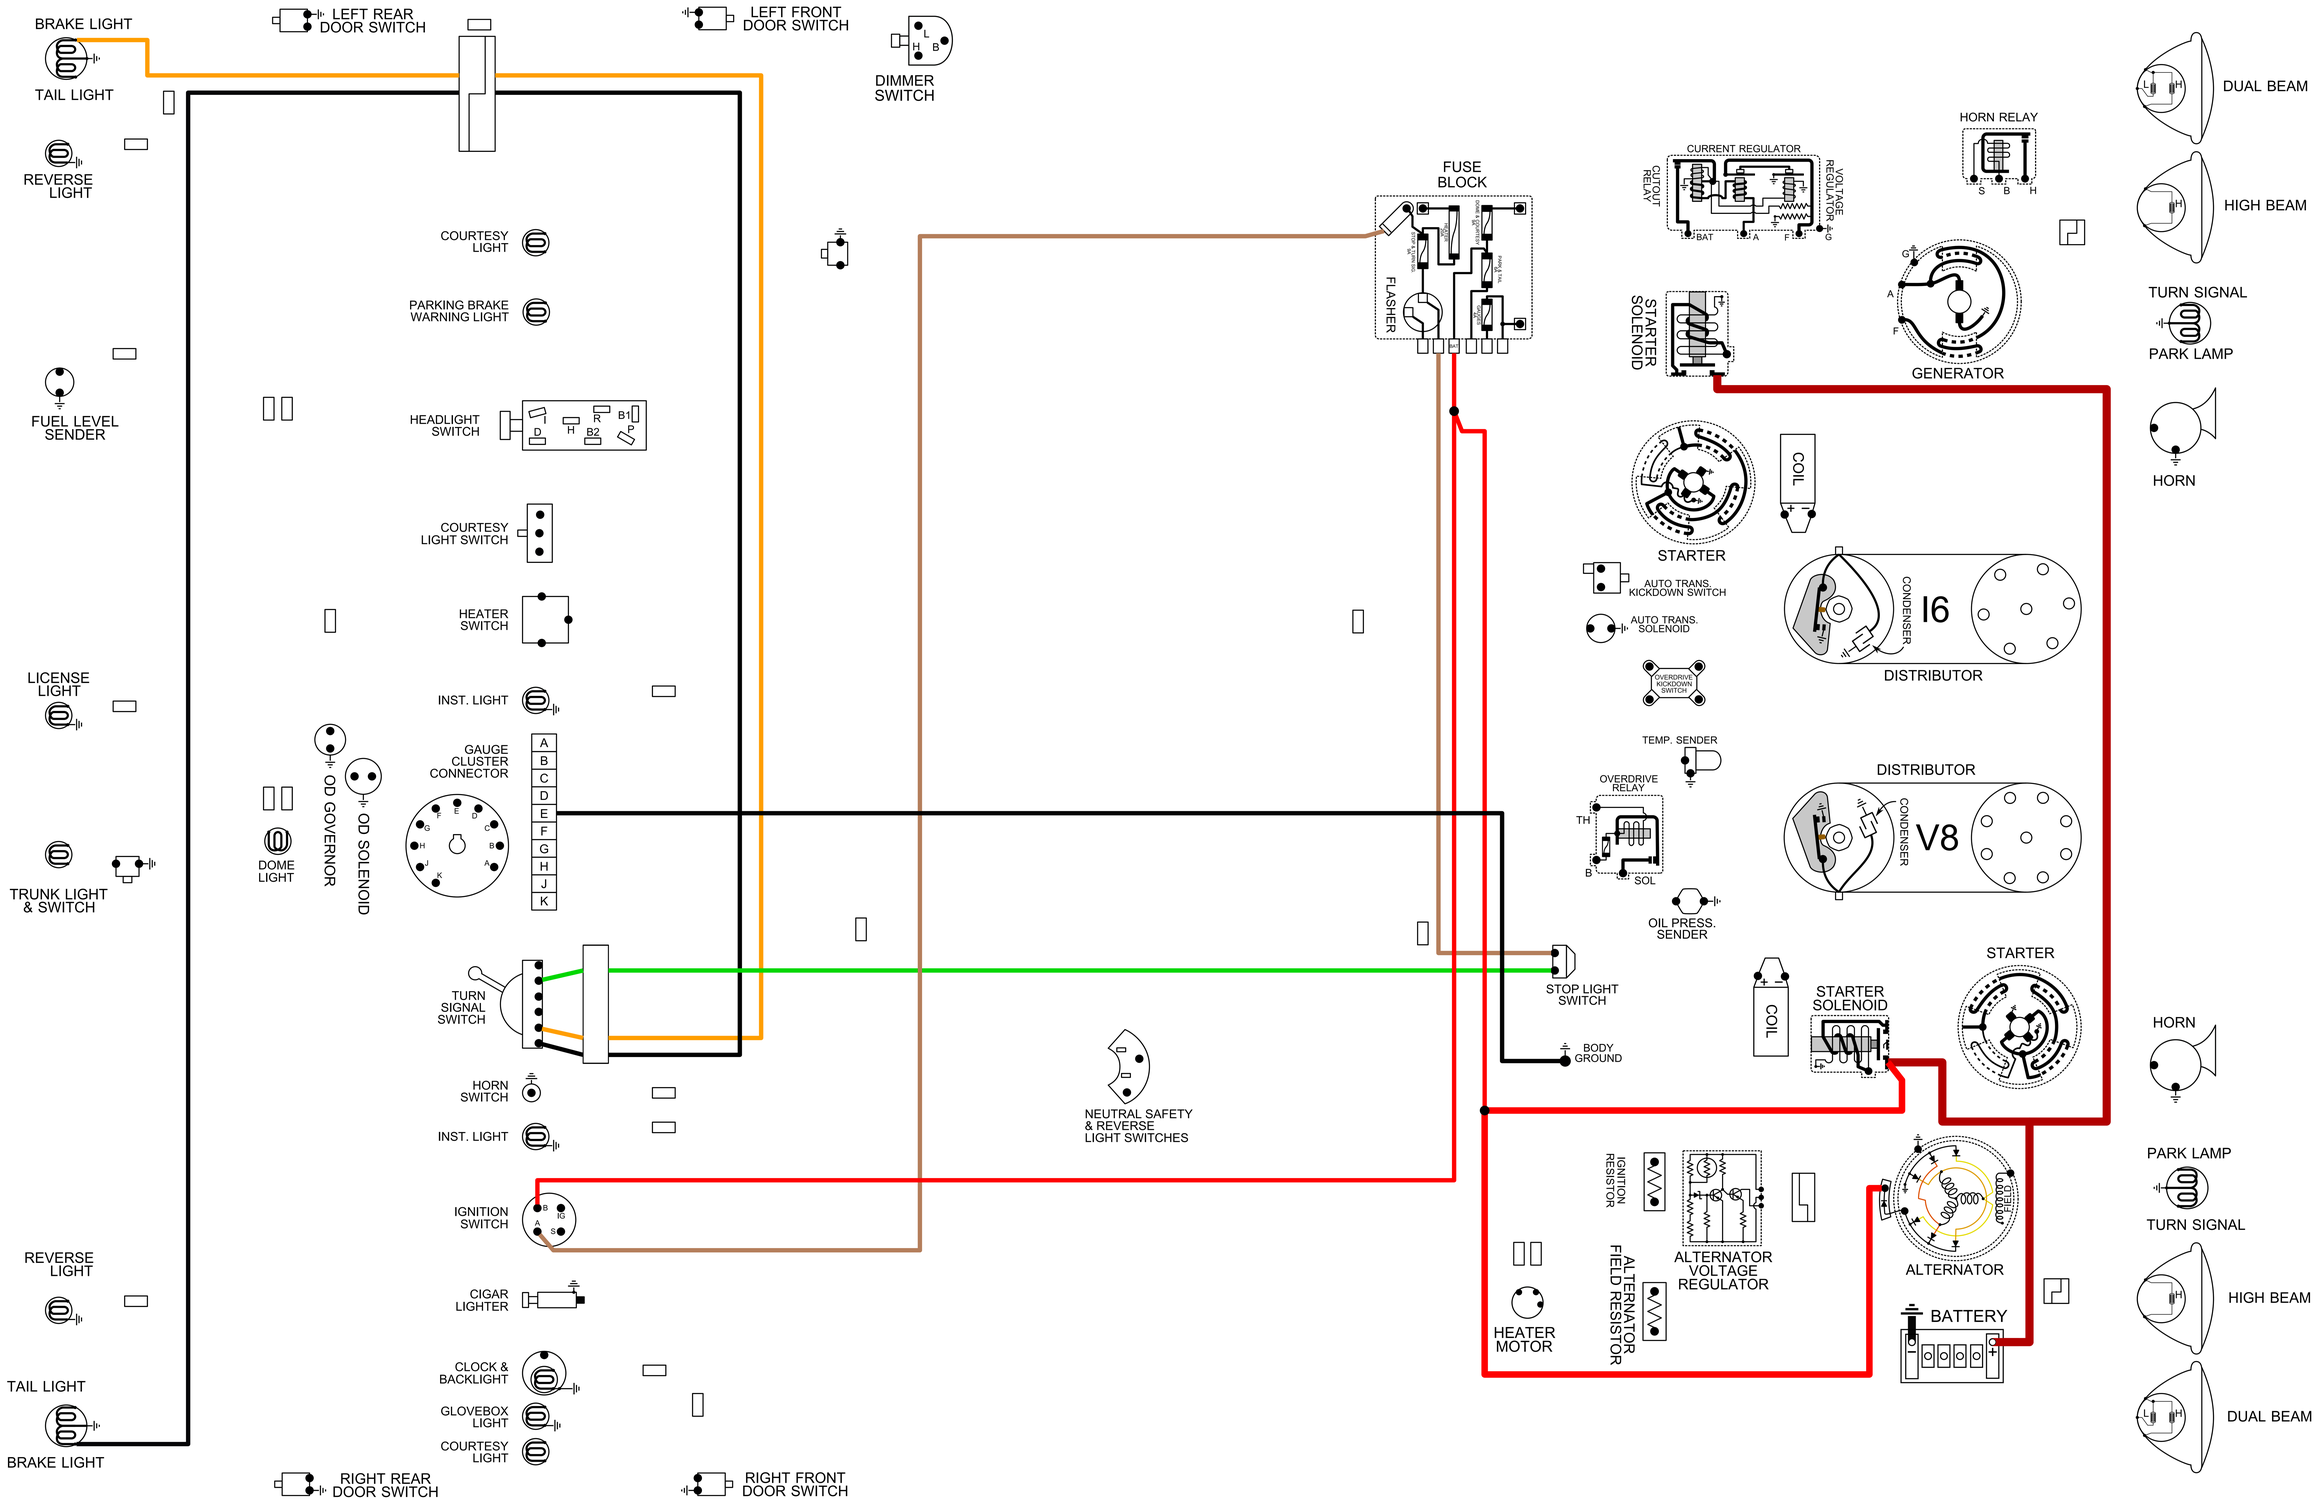

CINCO


1963 RAMBLER AMBASSADOR & CLASSIC

TURN SIGNALS

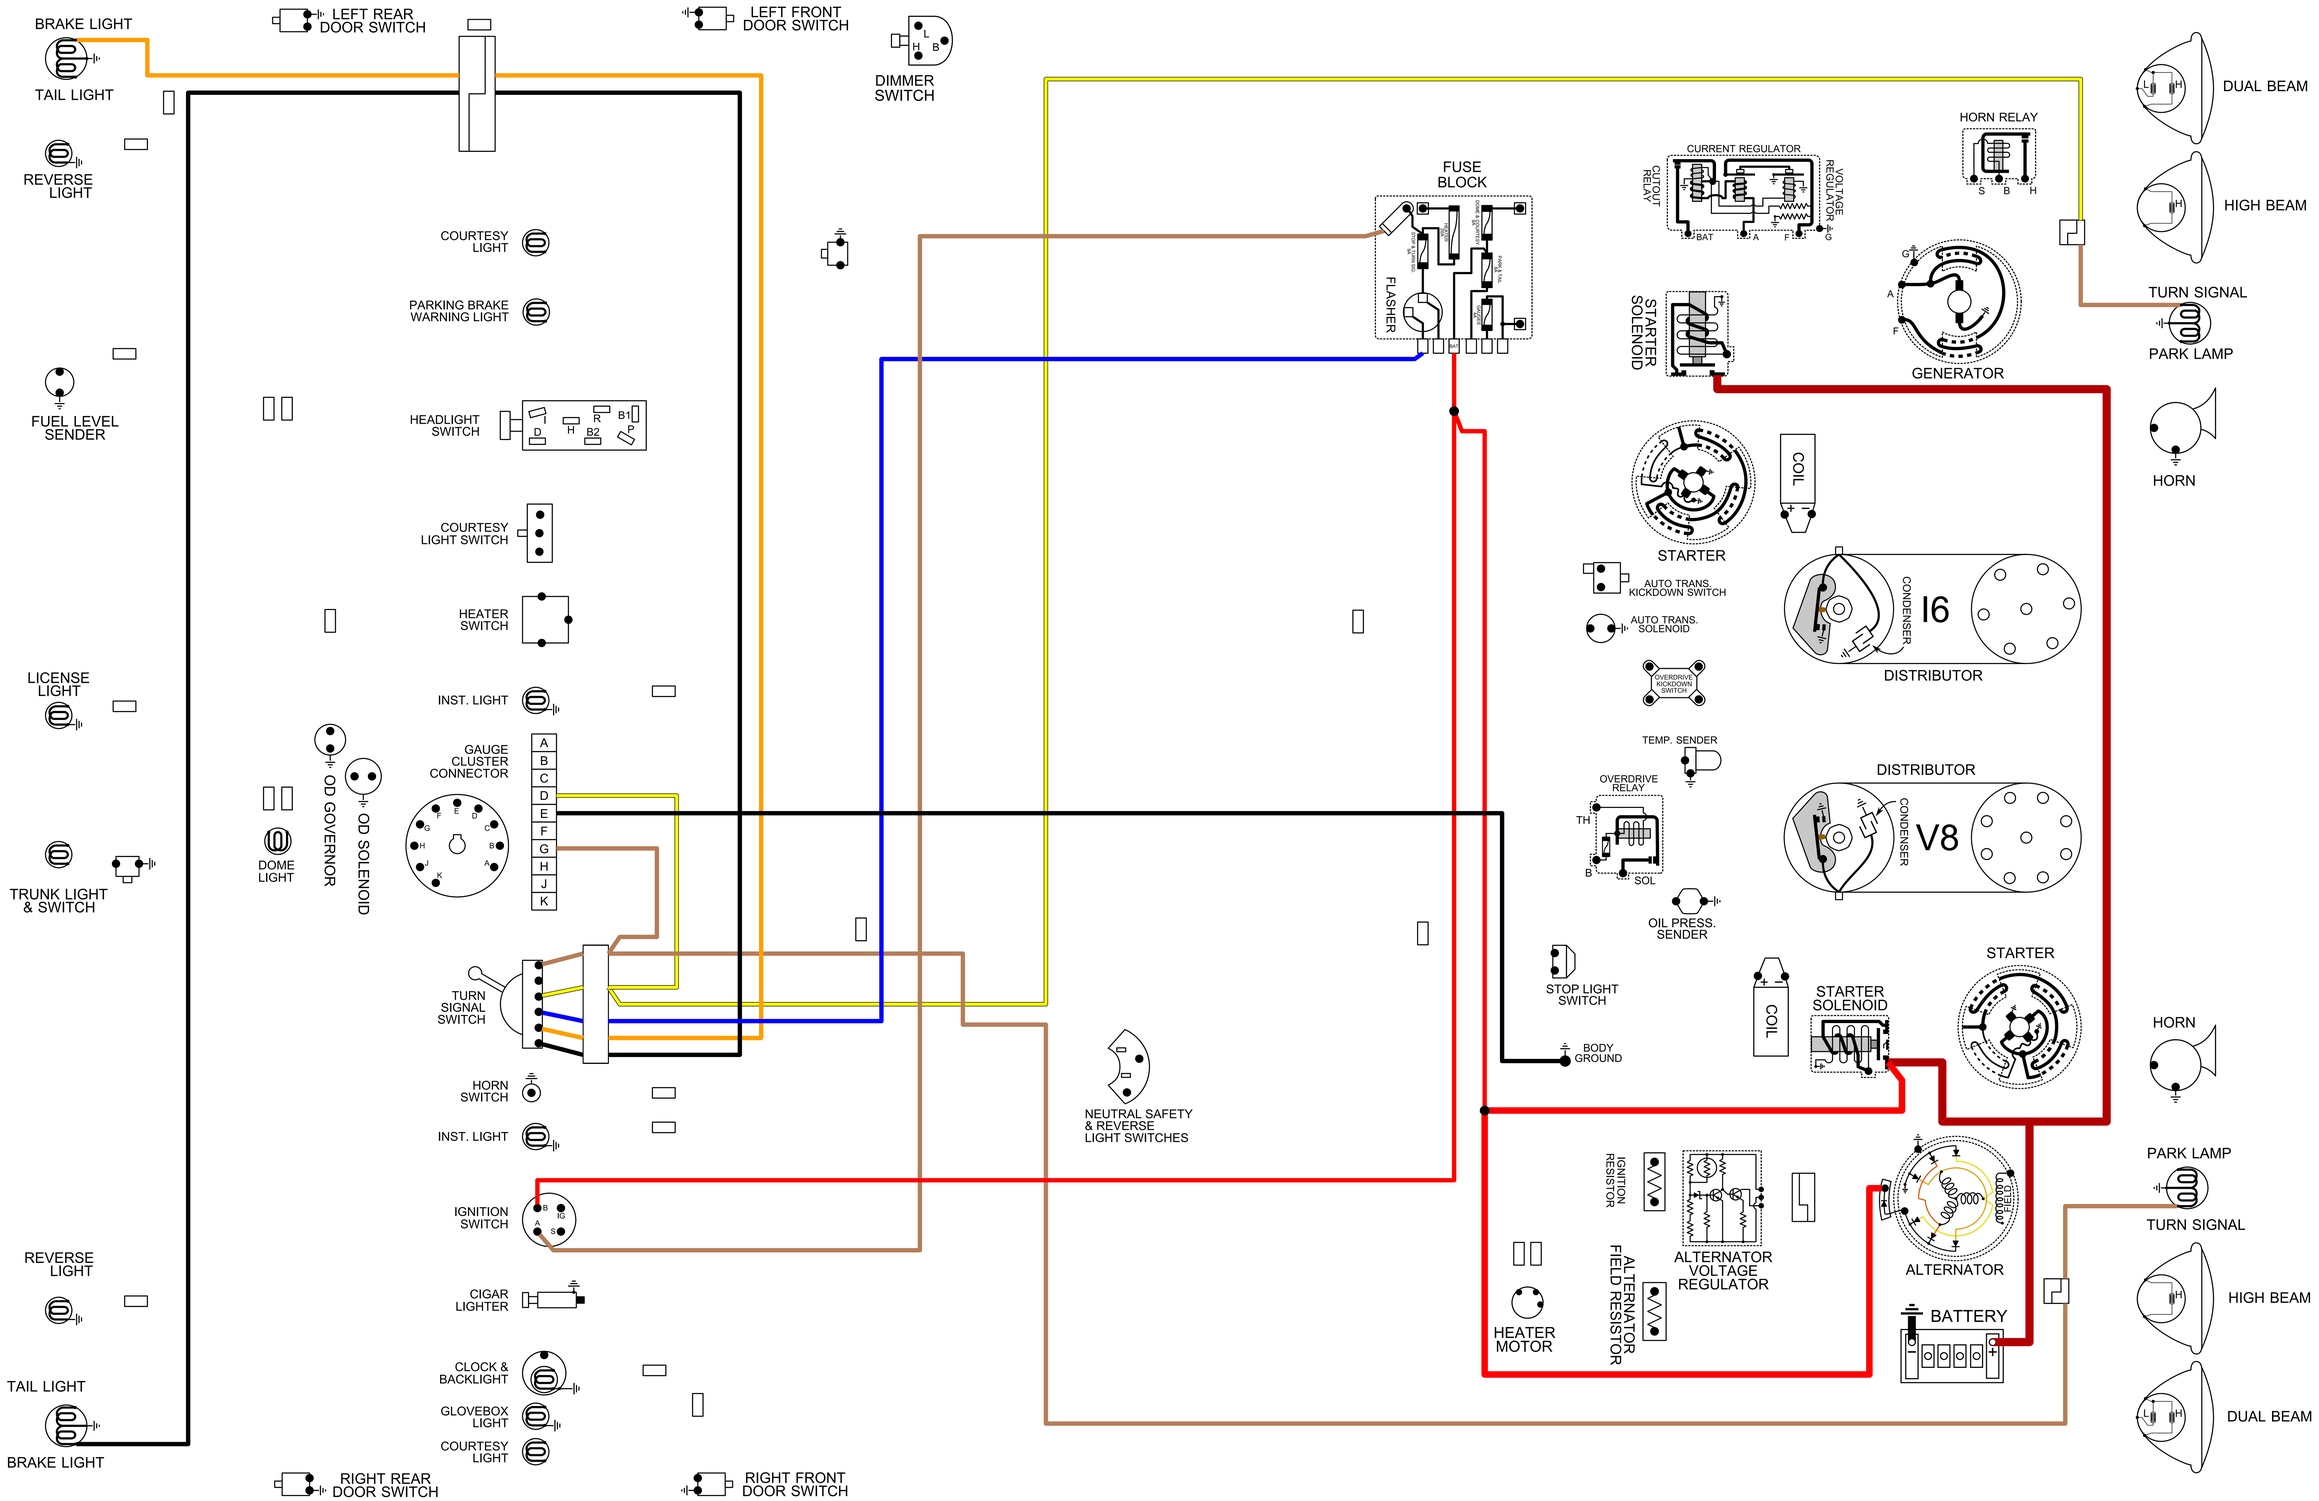

CINCO


1963 RAMBLER AMBASSADOR & CLASSIC
HEATER

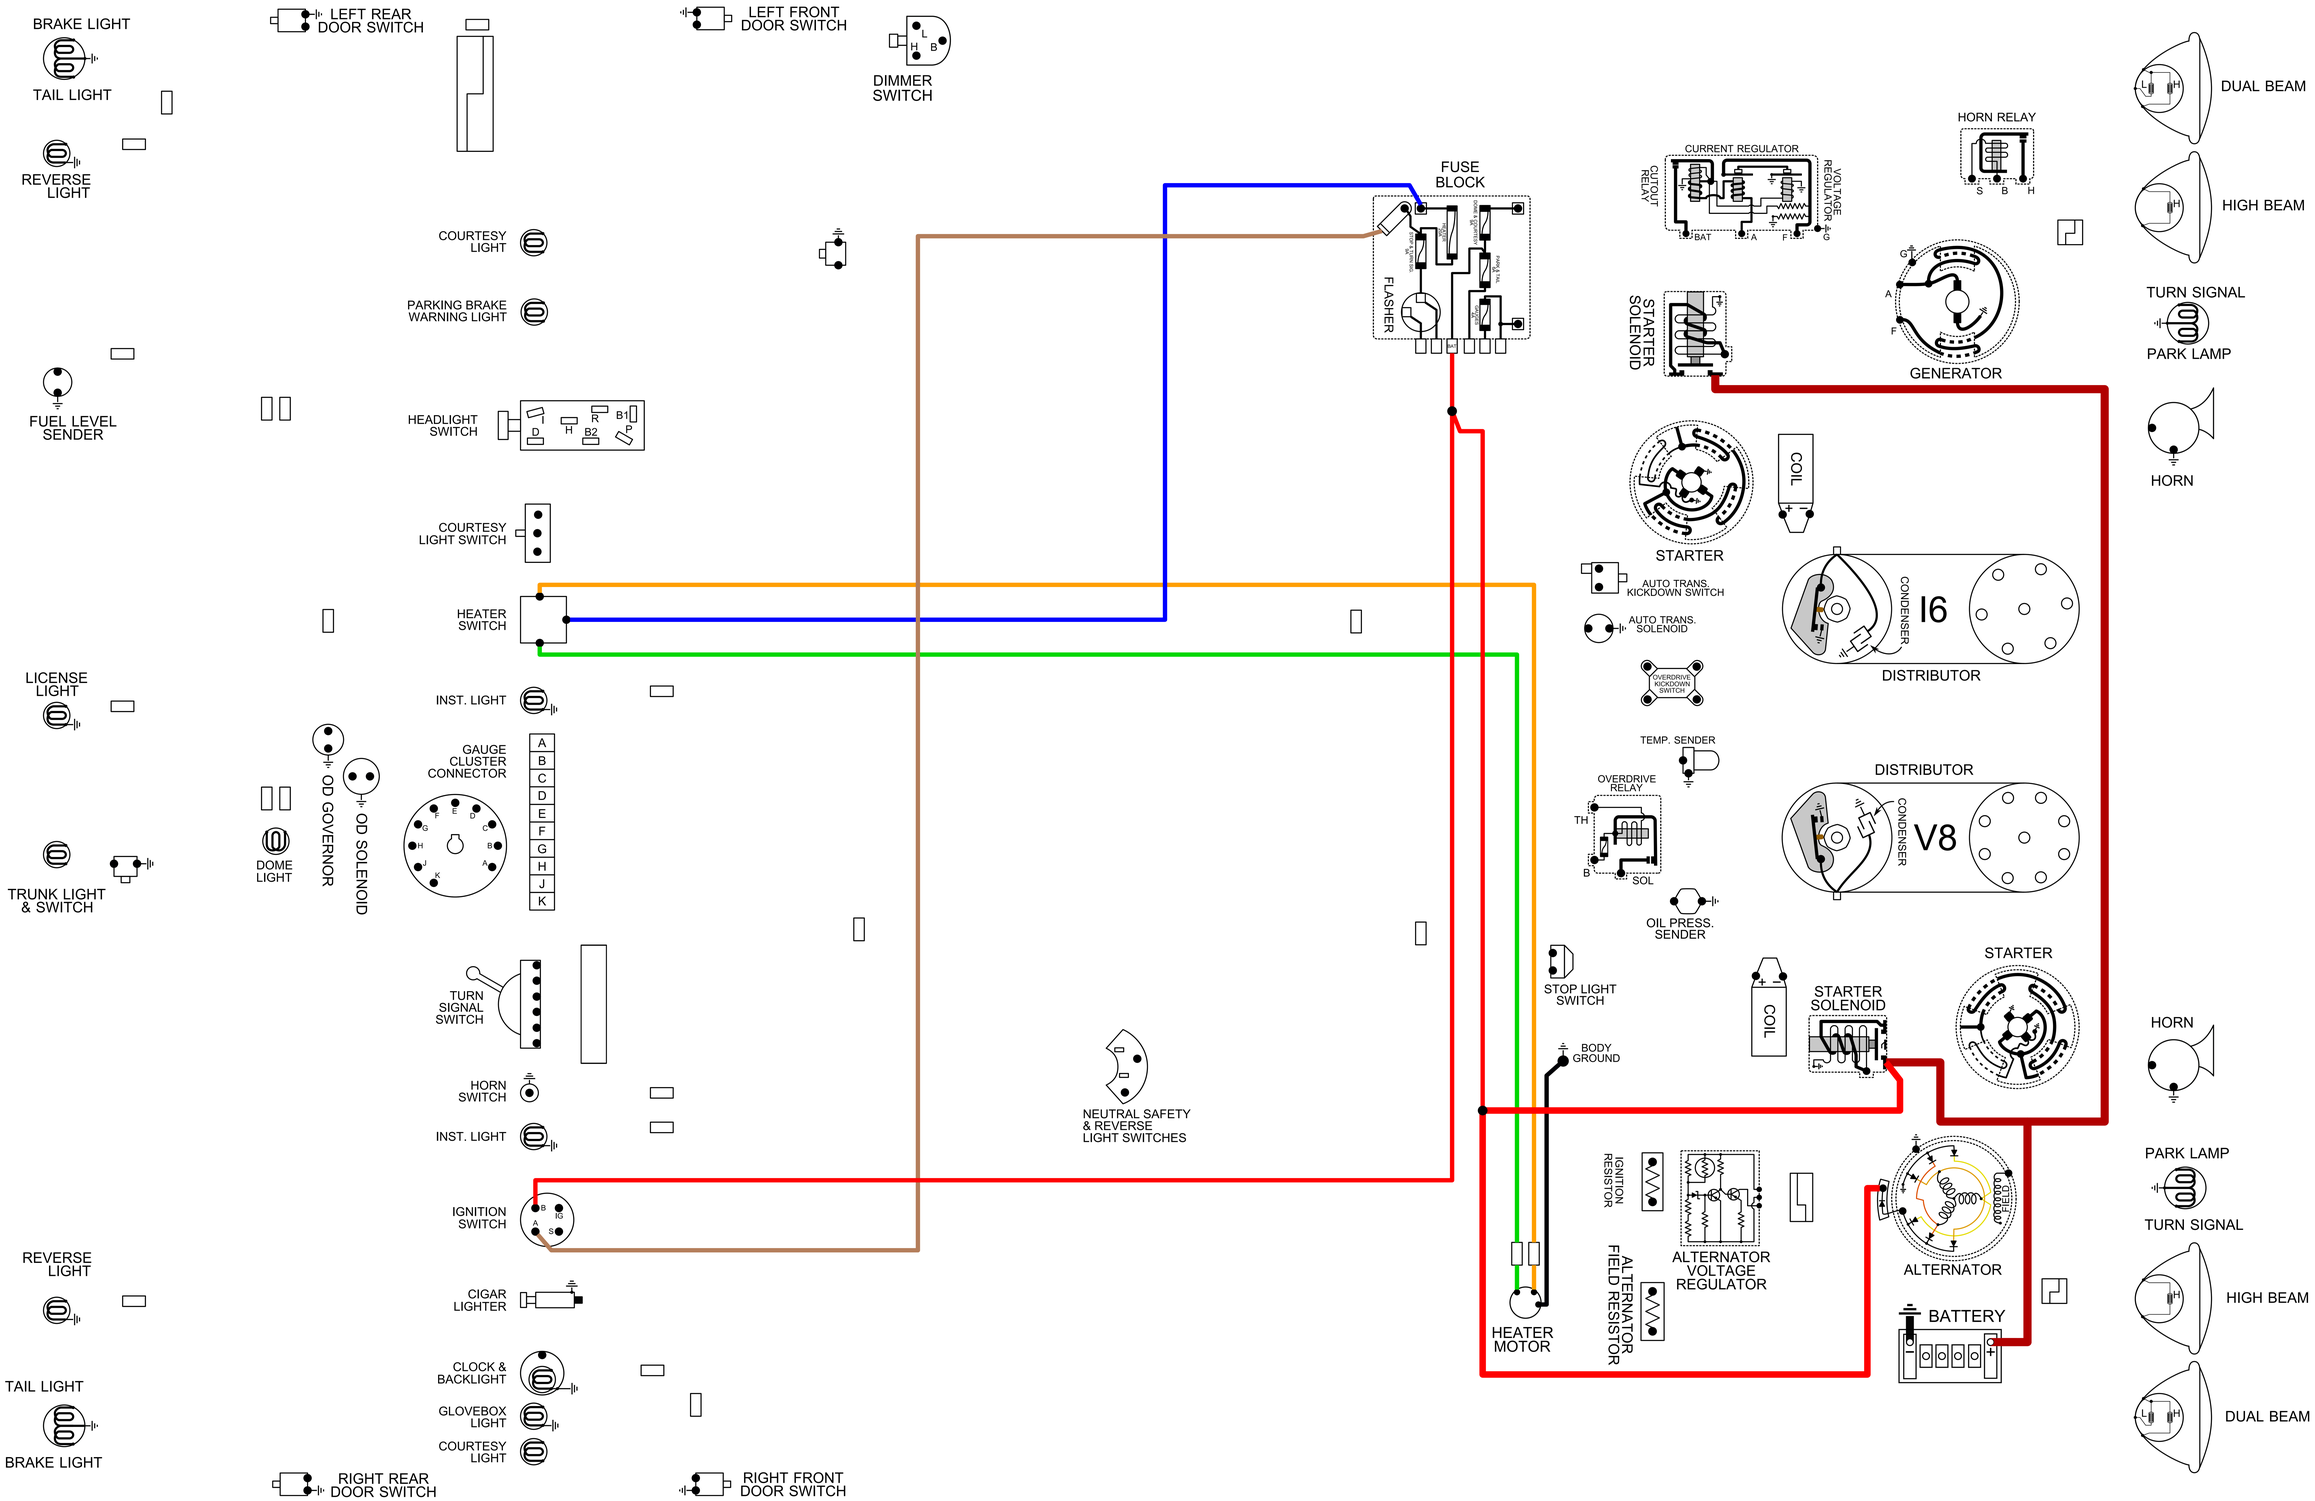

CINCO


1963 RAMBLER AMBASSADOR & CLASSIC

HORN

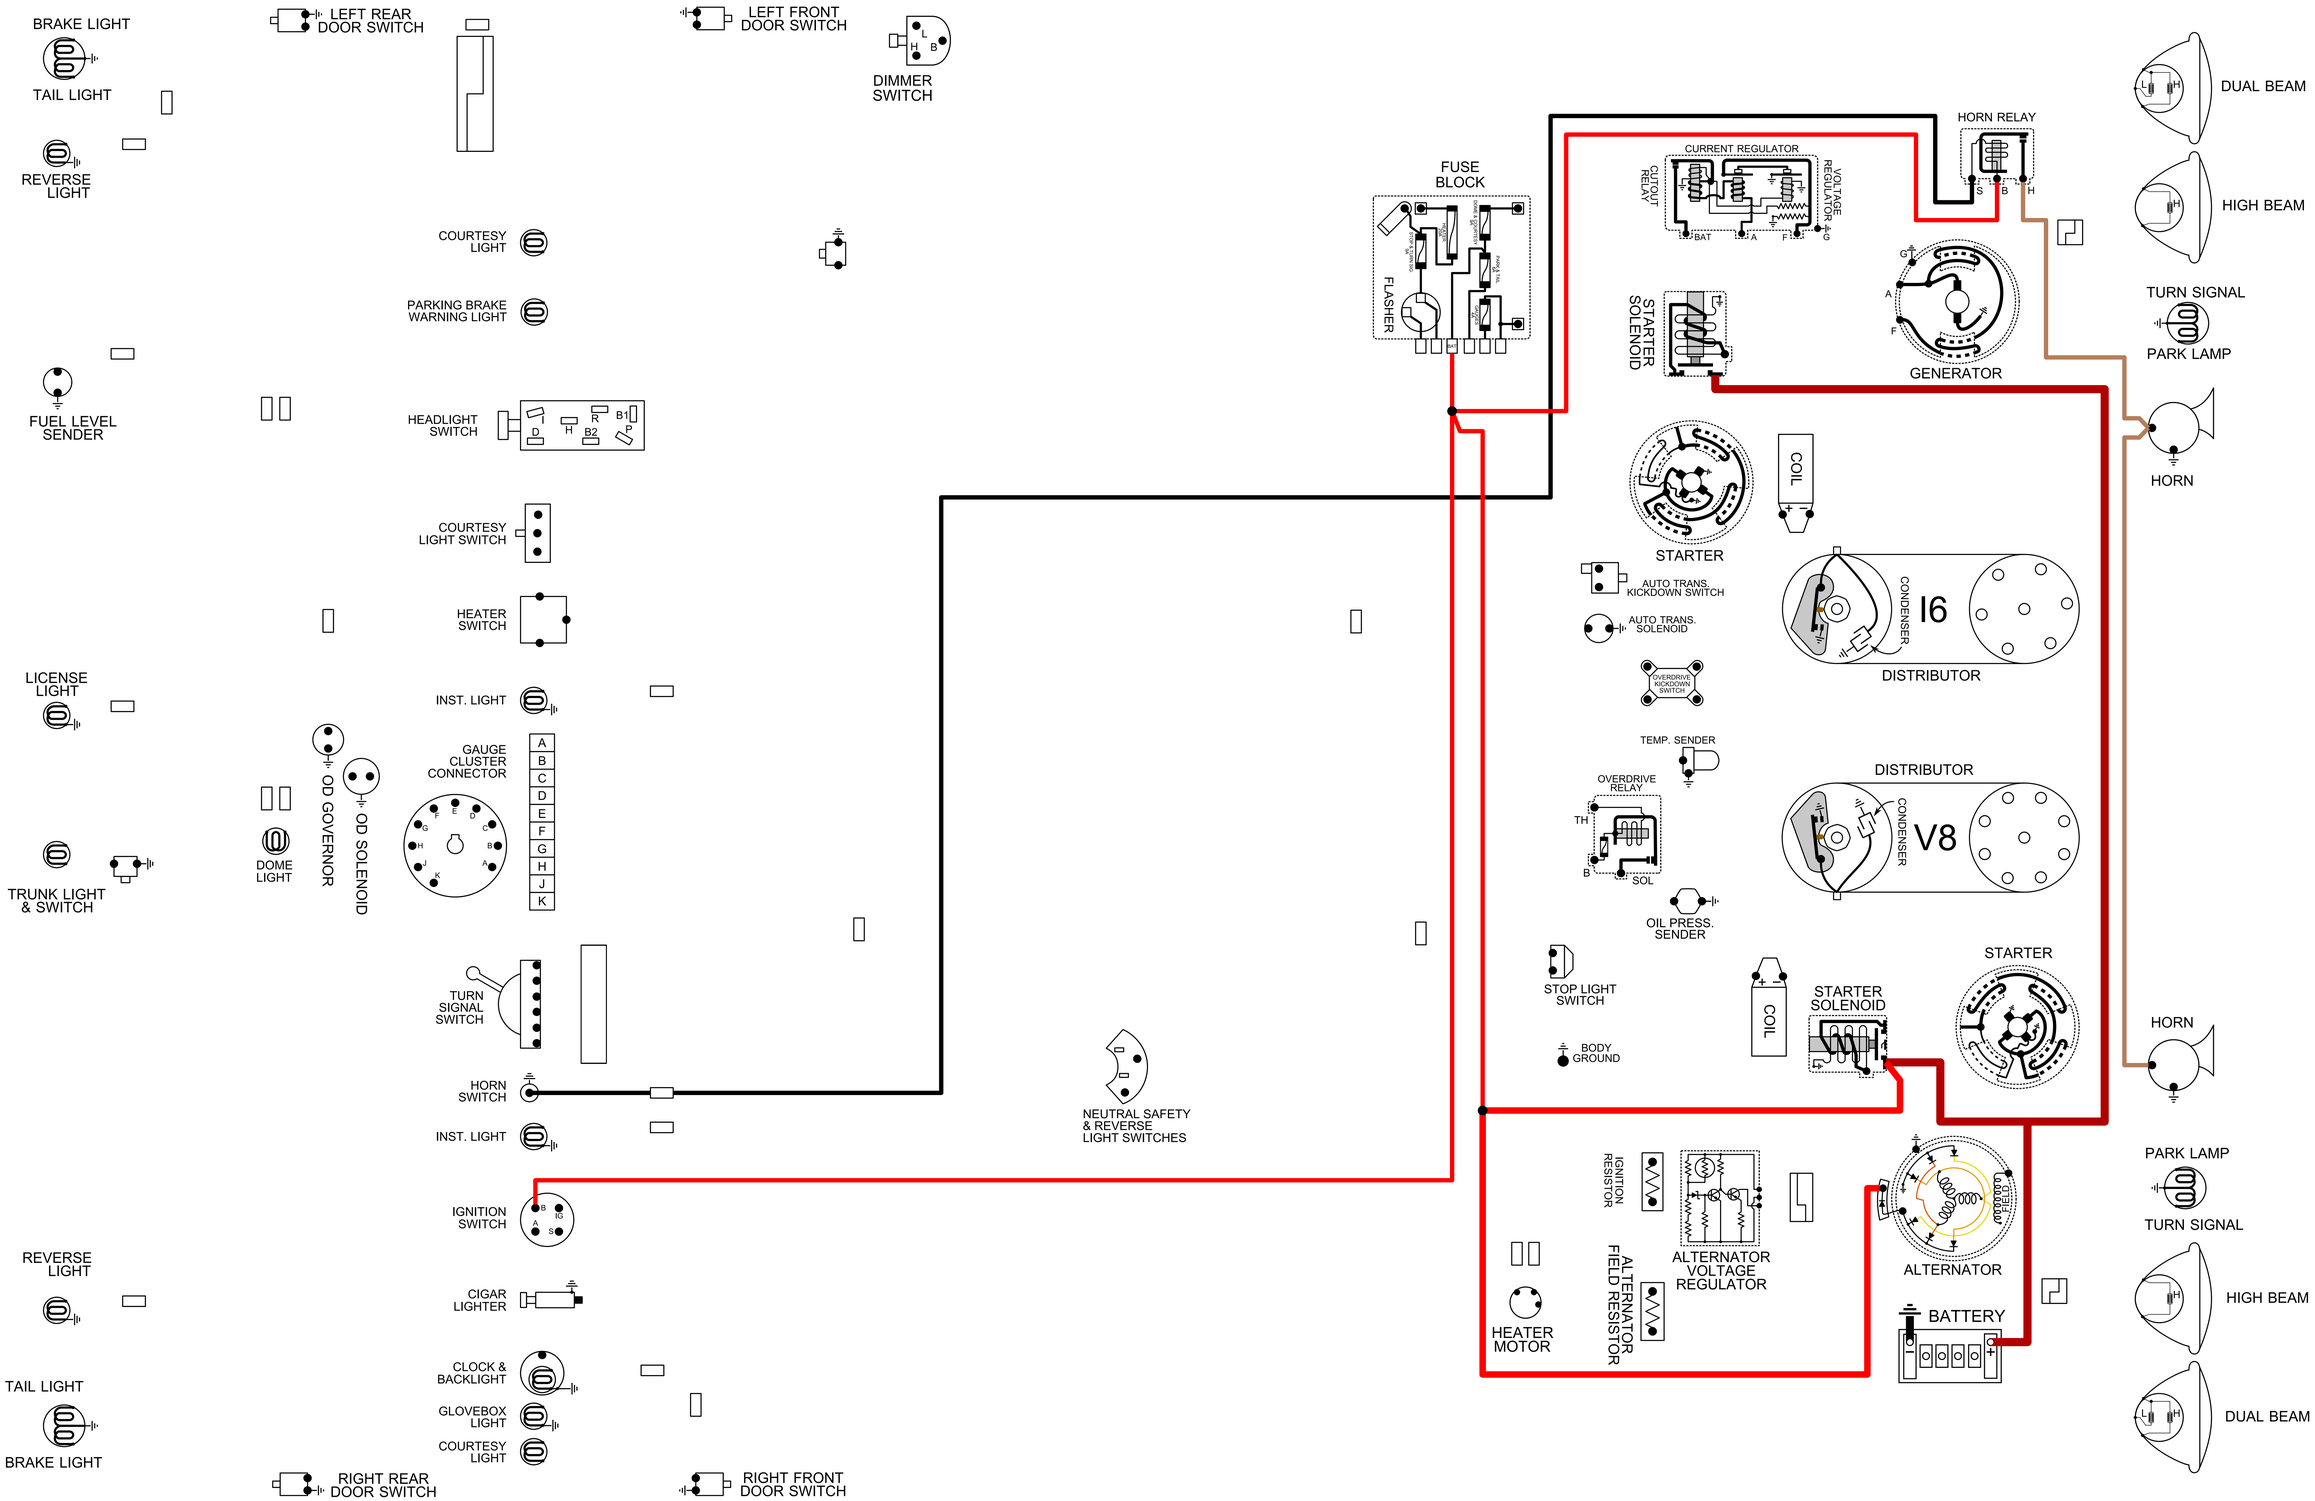

CINCO


1963 RAMBLER AMBASSADOR & CLASSIC
TRANSMISSION

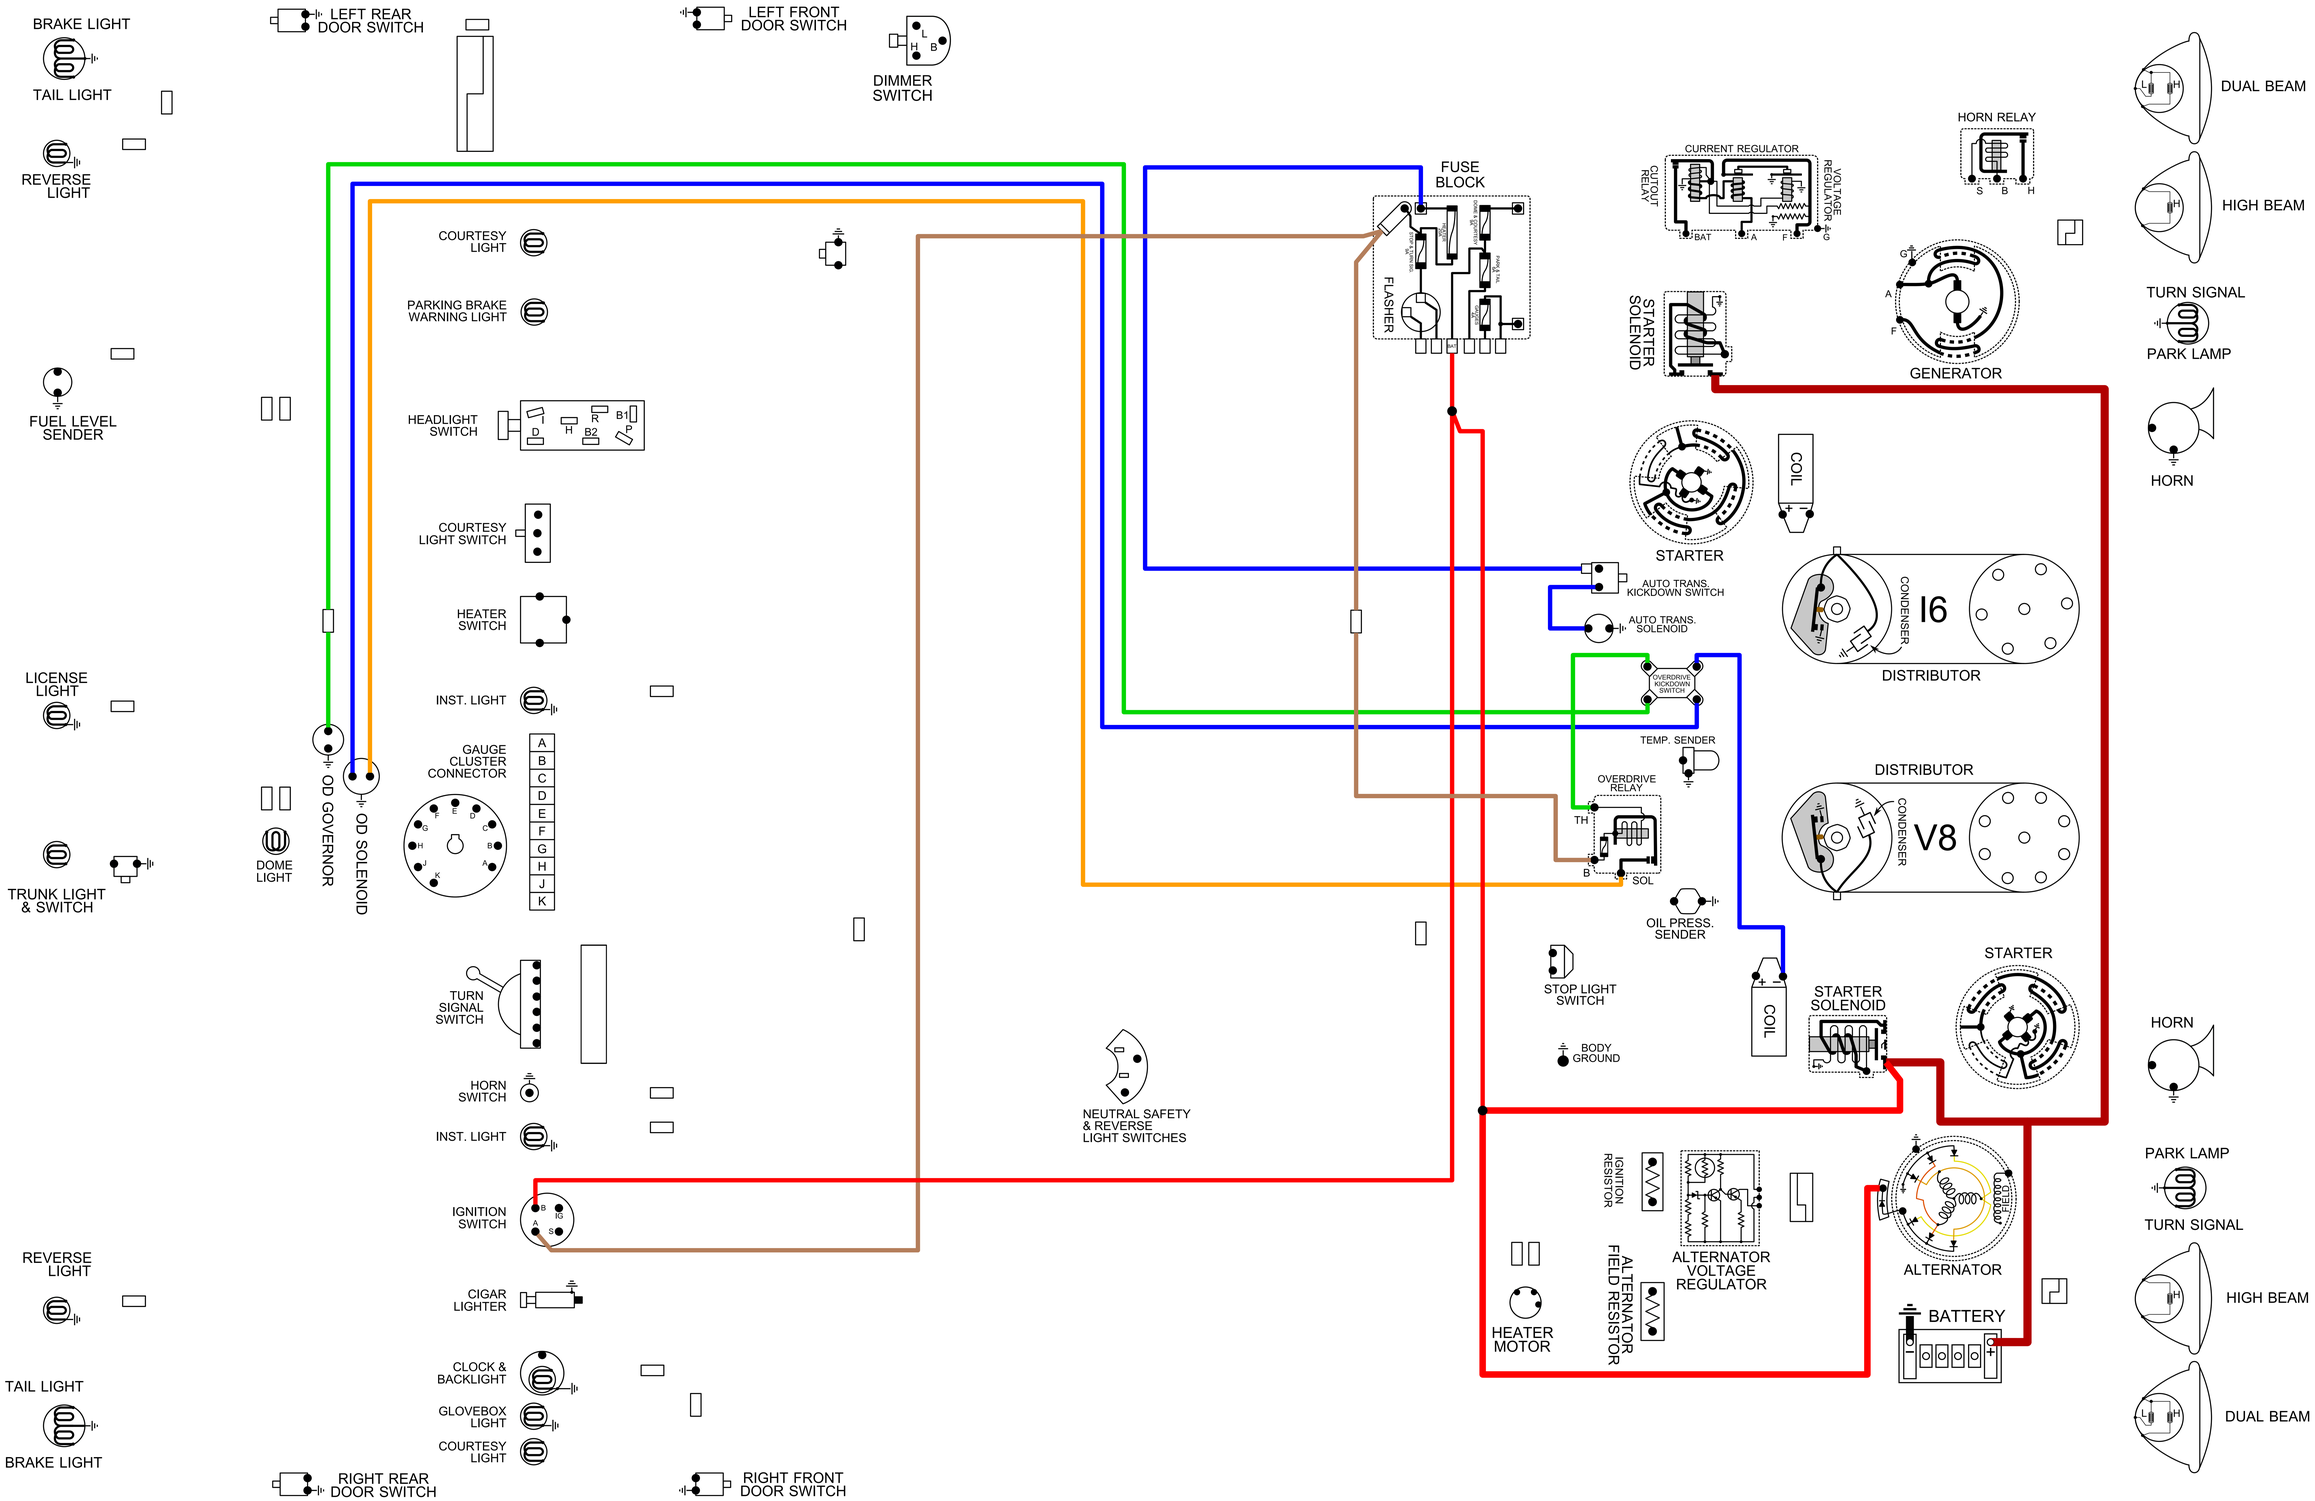

CINCO

1963 RAMBLER AMBASSADOR & CLASSIC


GAUGES & WARNING LIGHTS

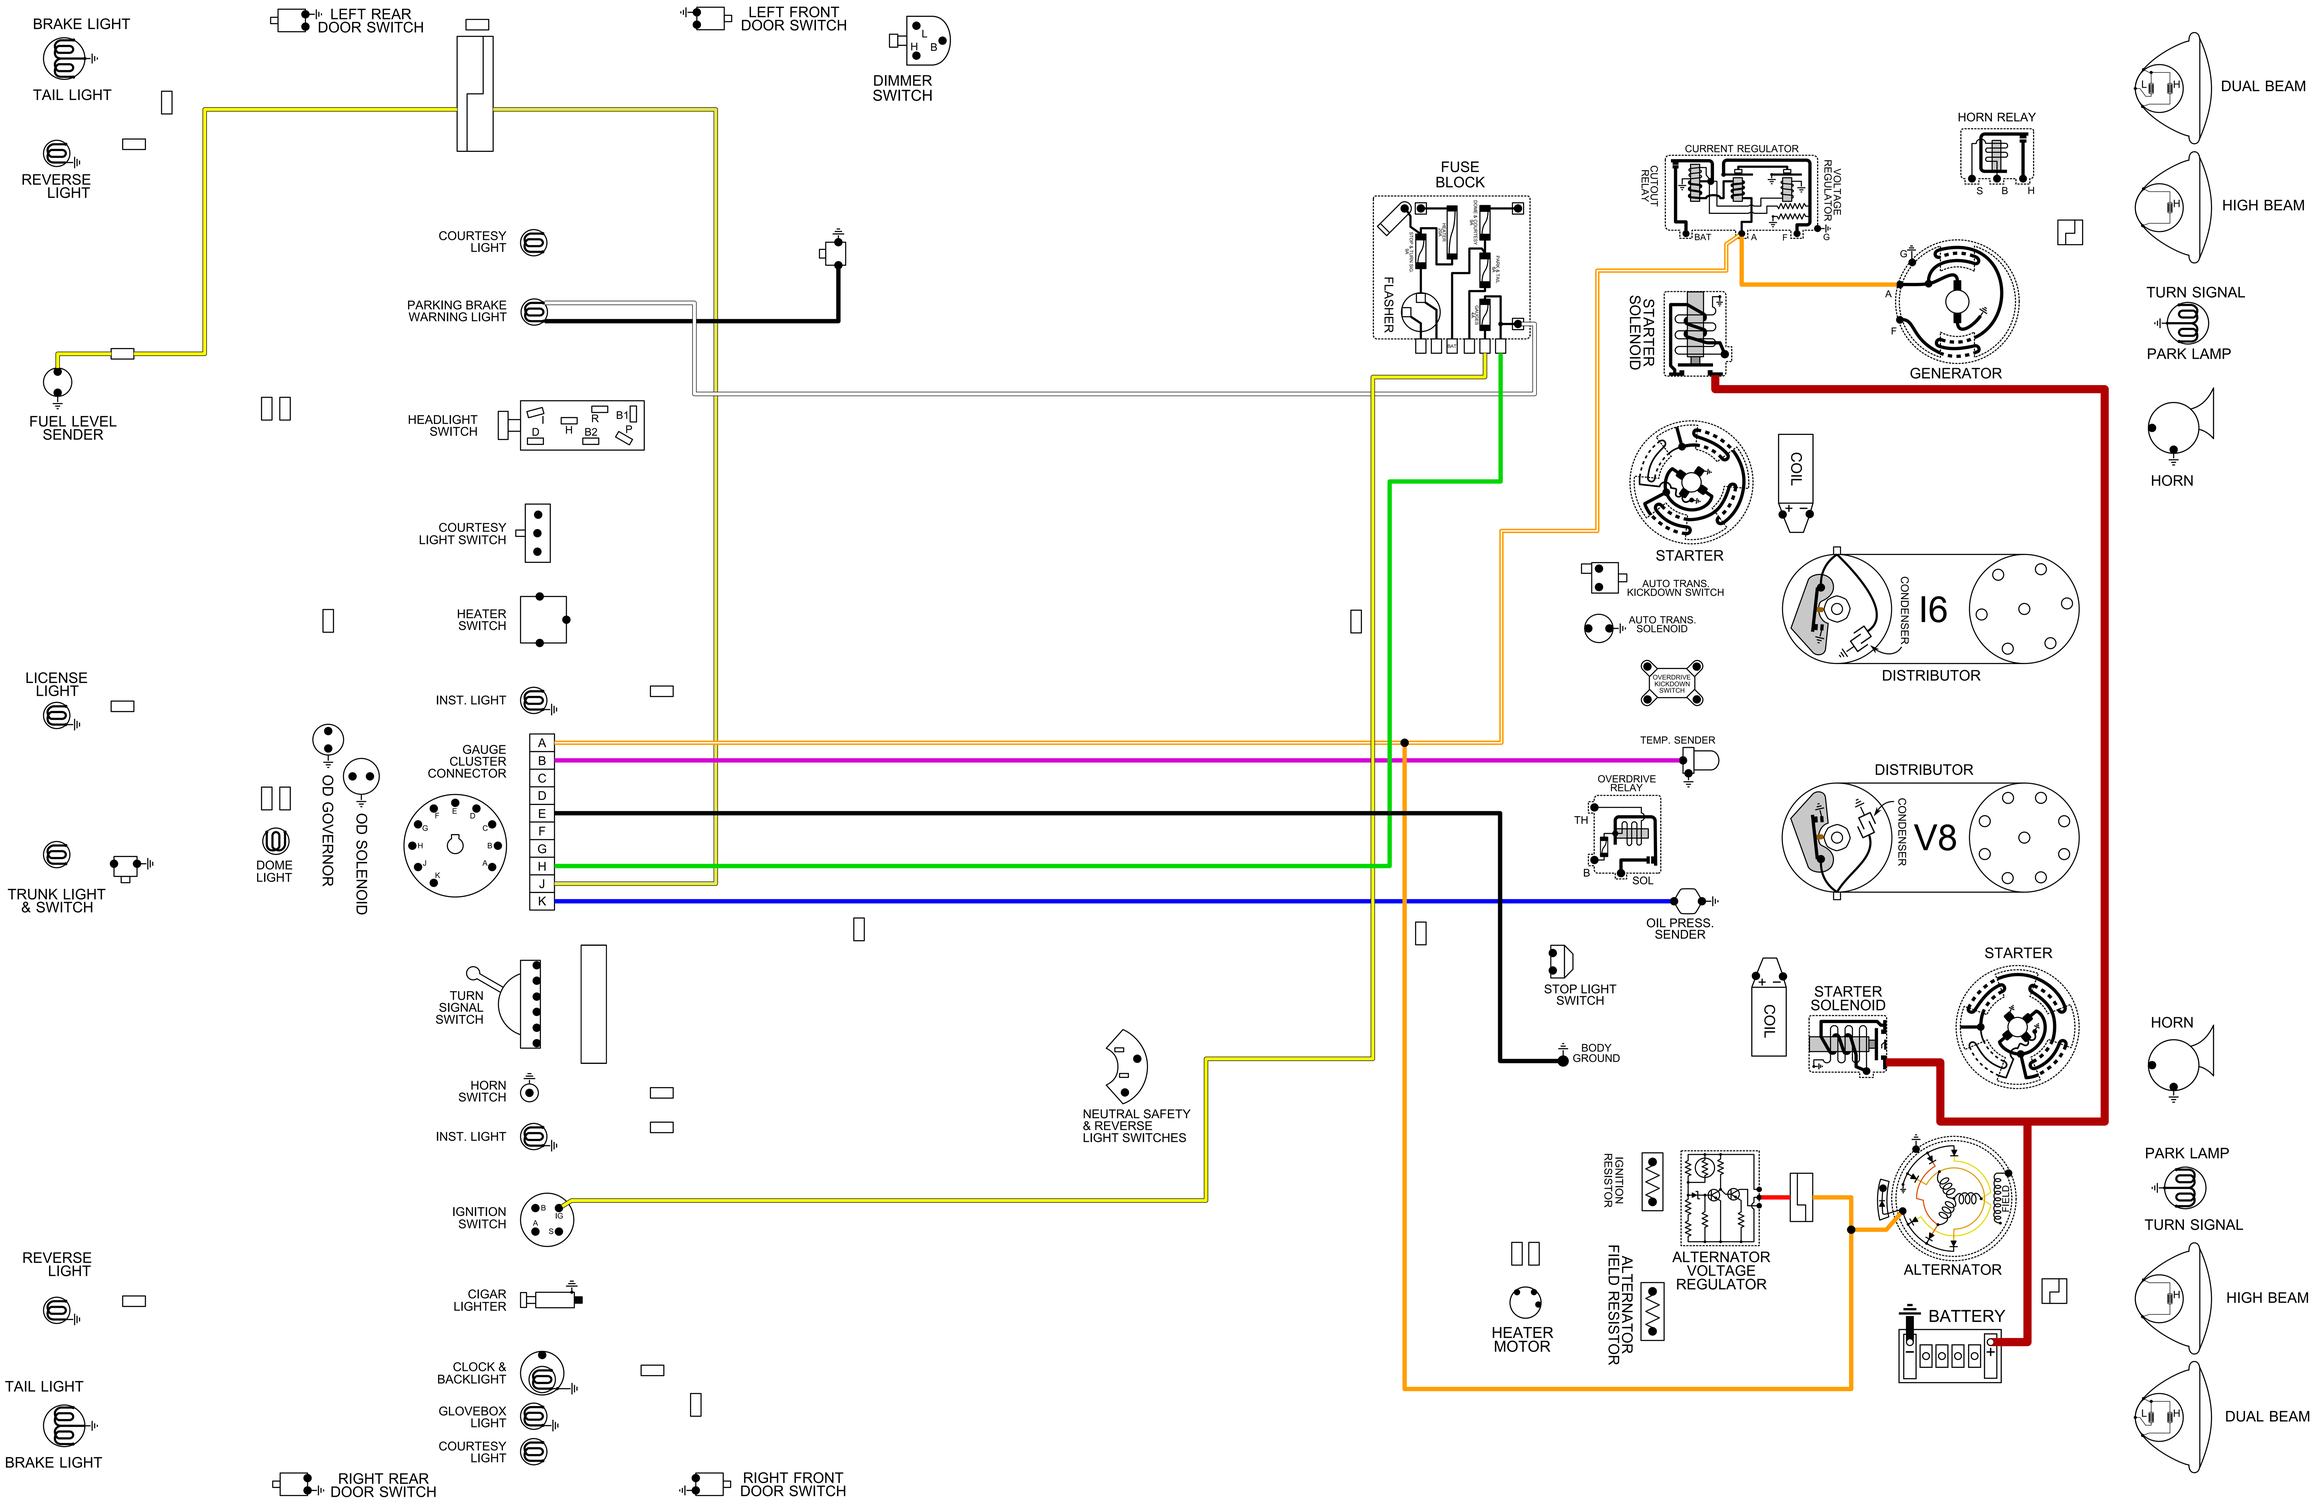

CINCO

1963 RAMBLER AMBASSADOR & CLASSIC


REVERSE LIGHTS

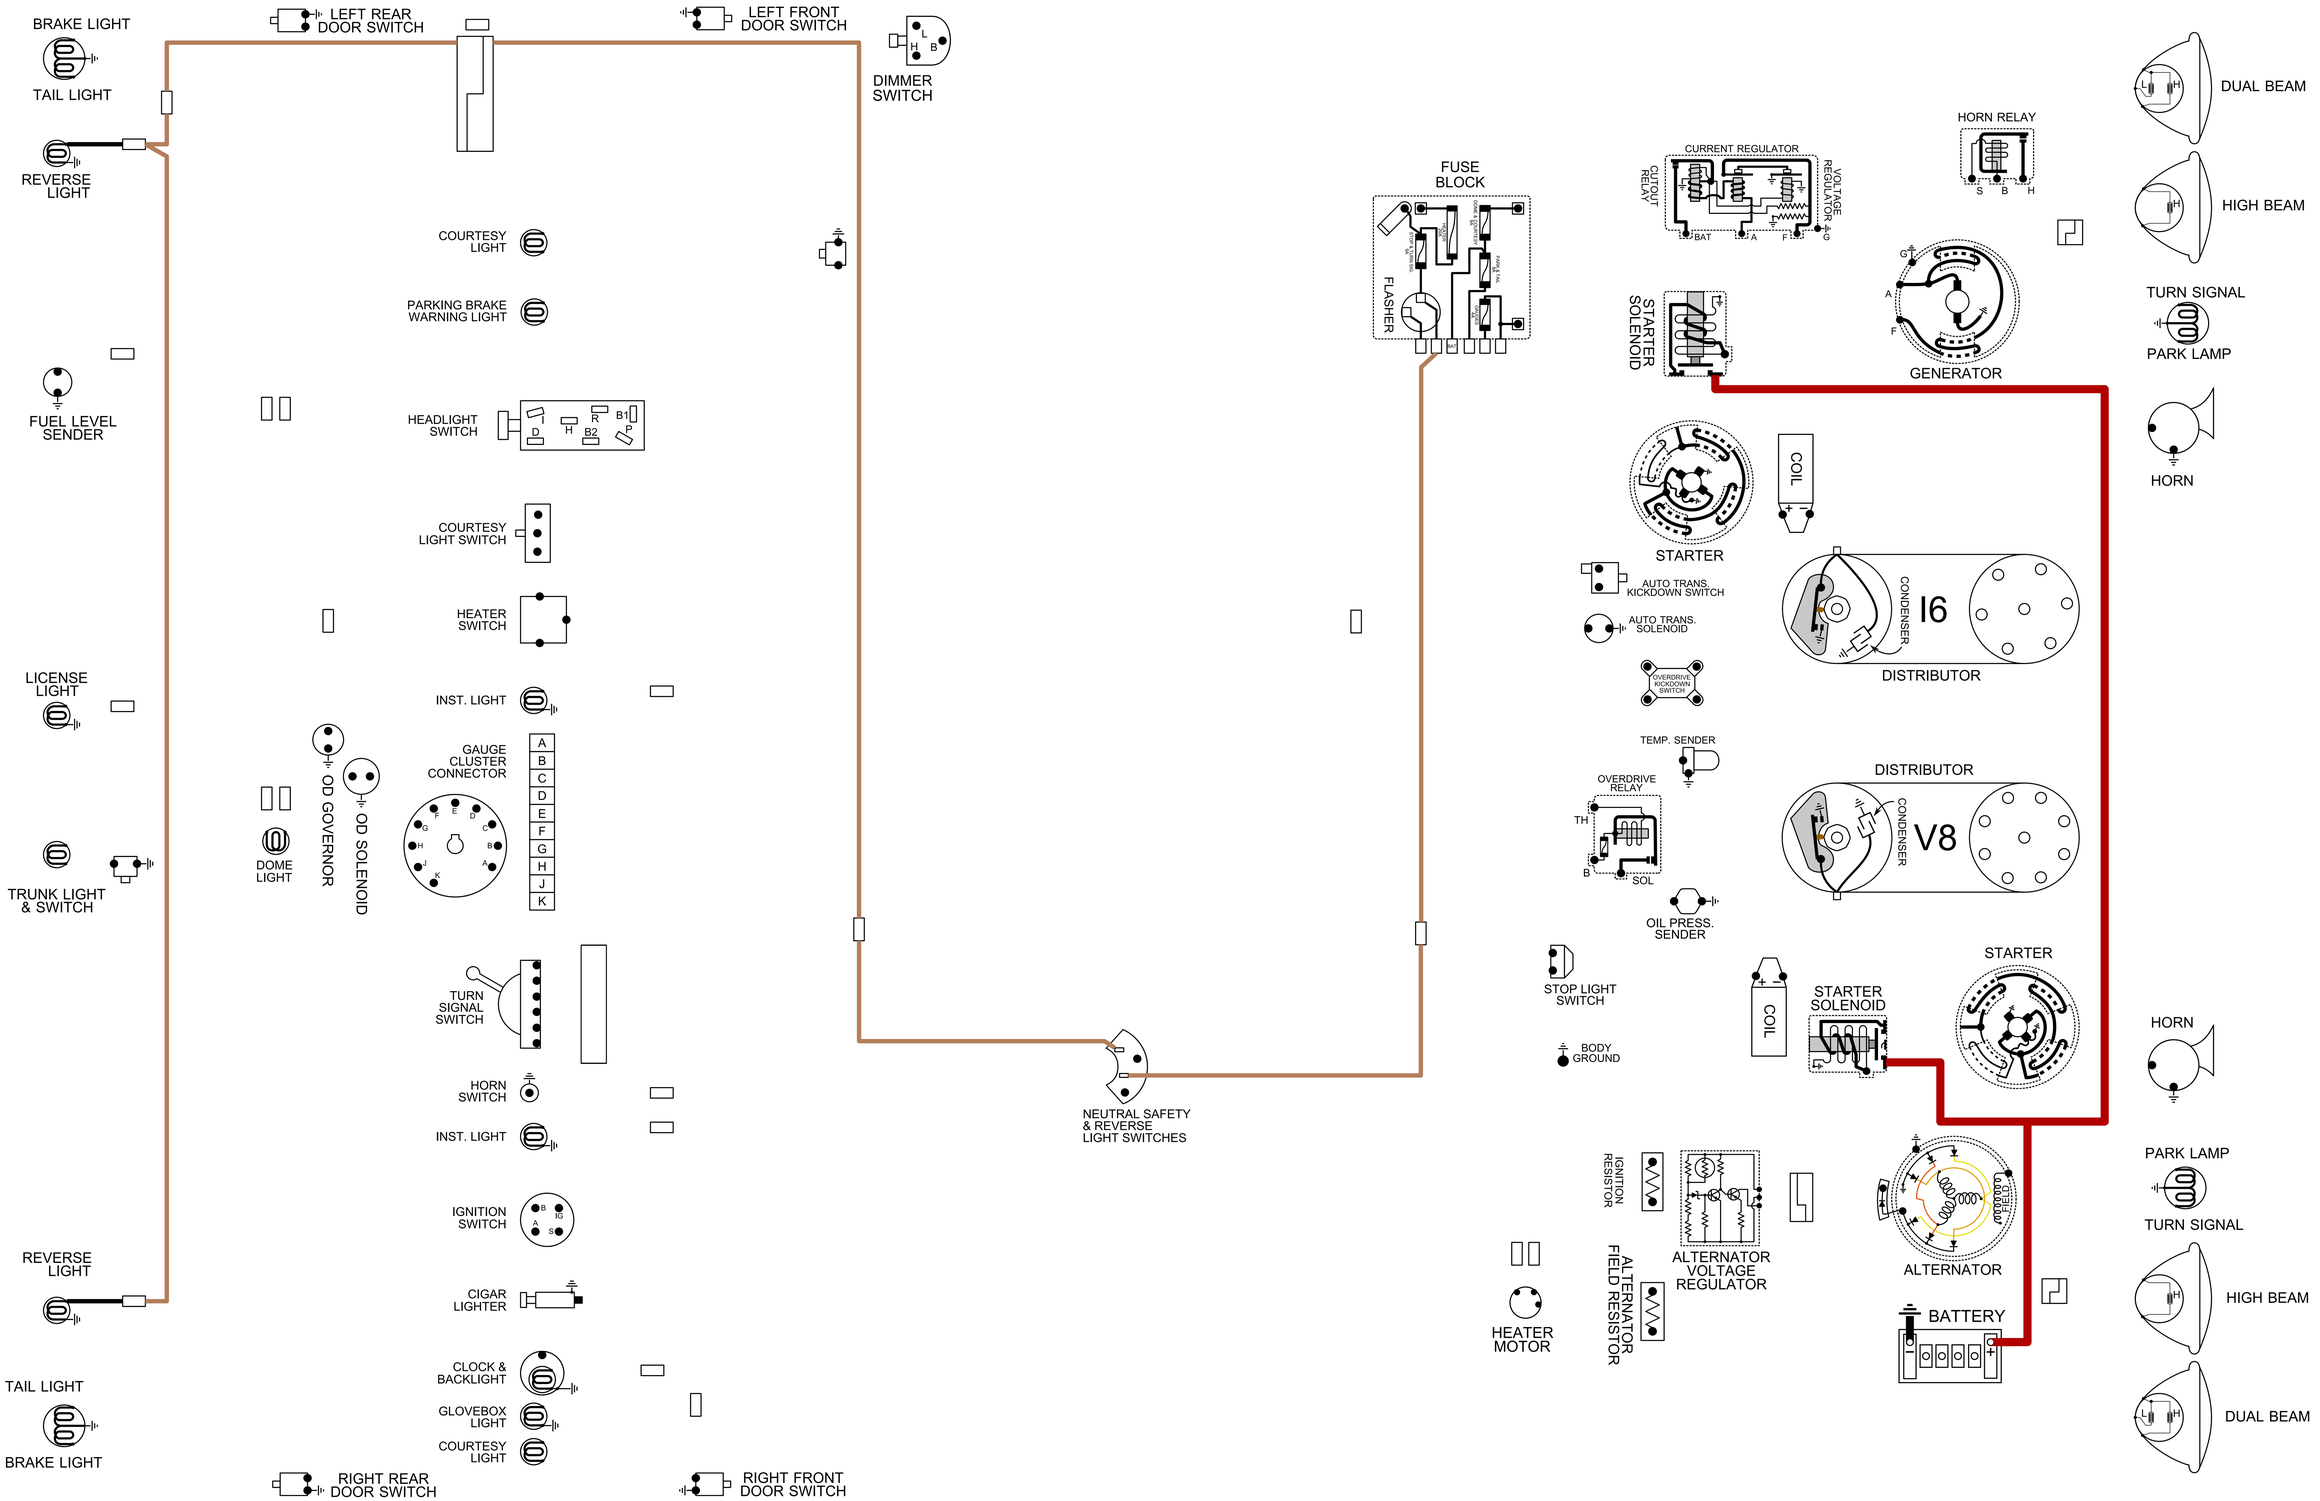

CINCO


1963 RAMBLER AMBASSADOR & CLASSIC

DOME & COURTESY LIGHTS

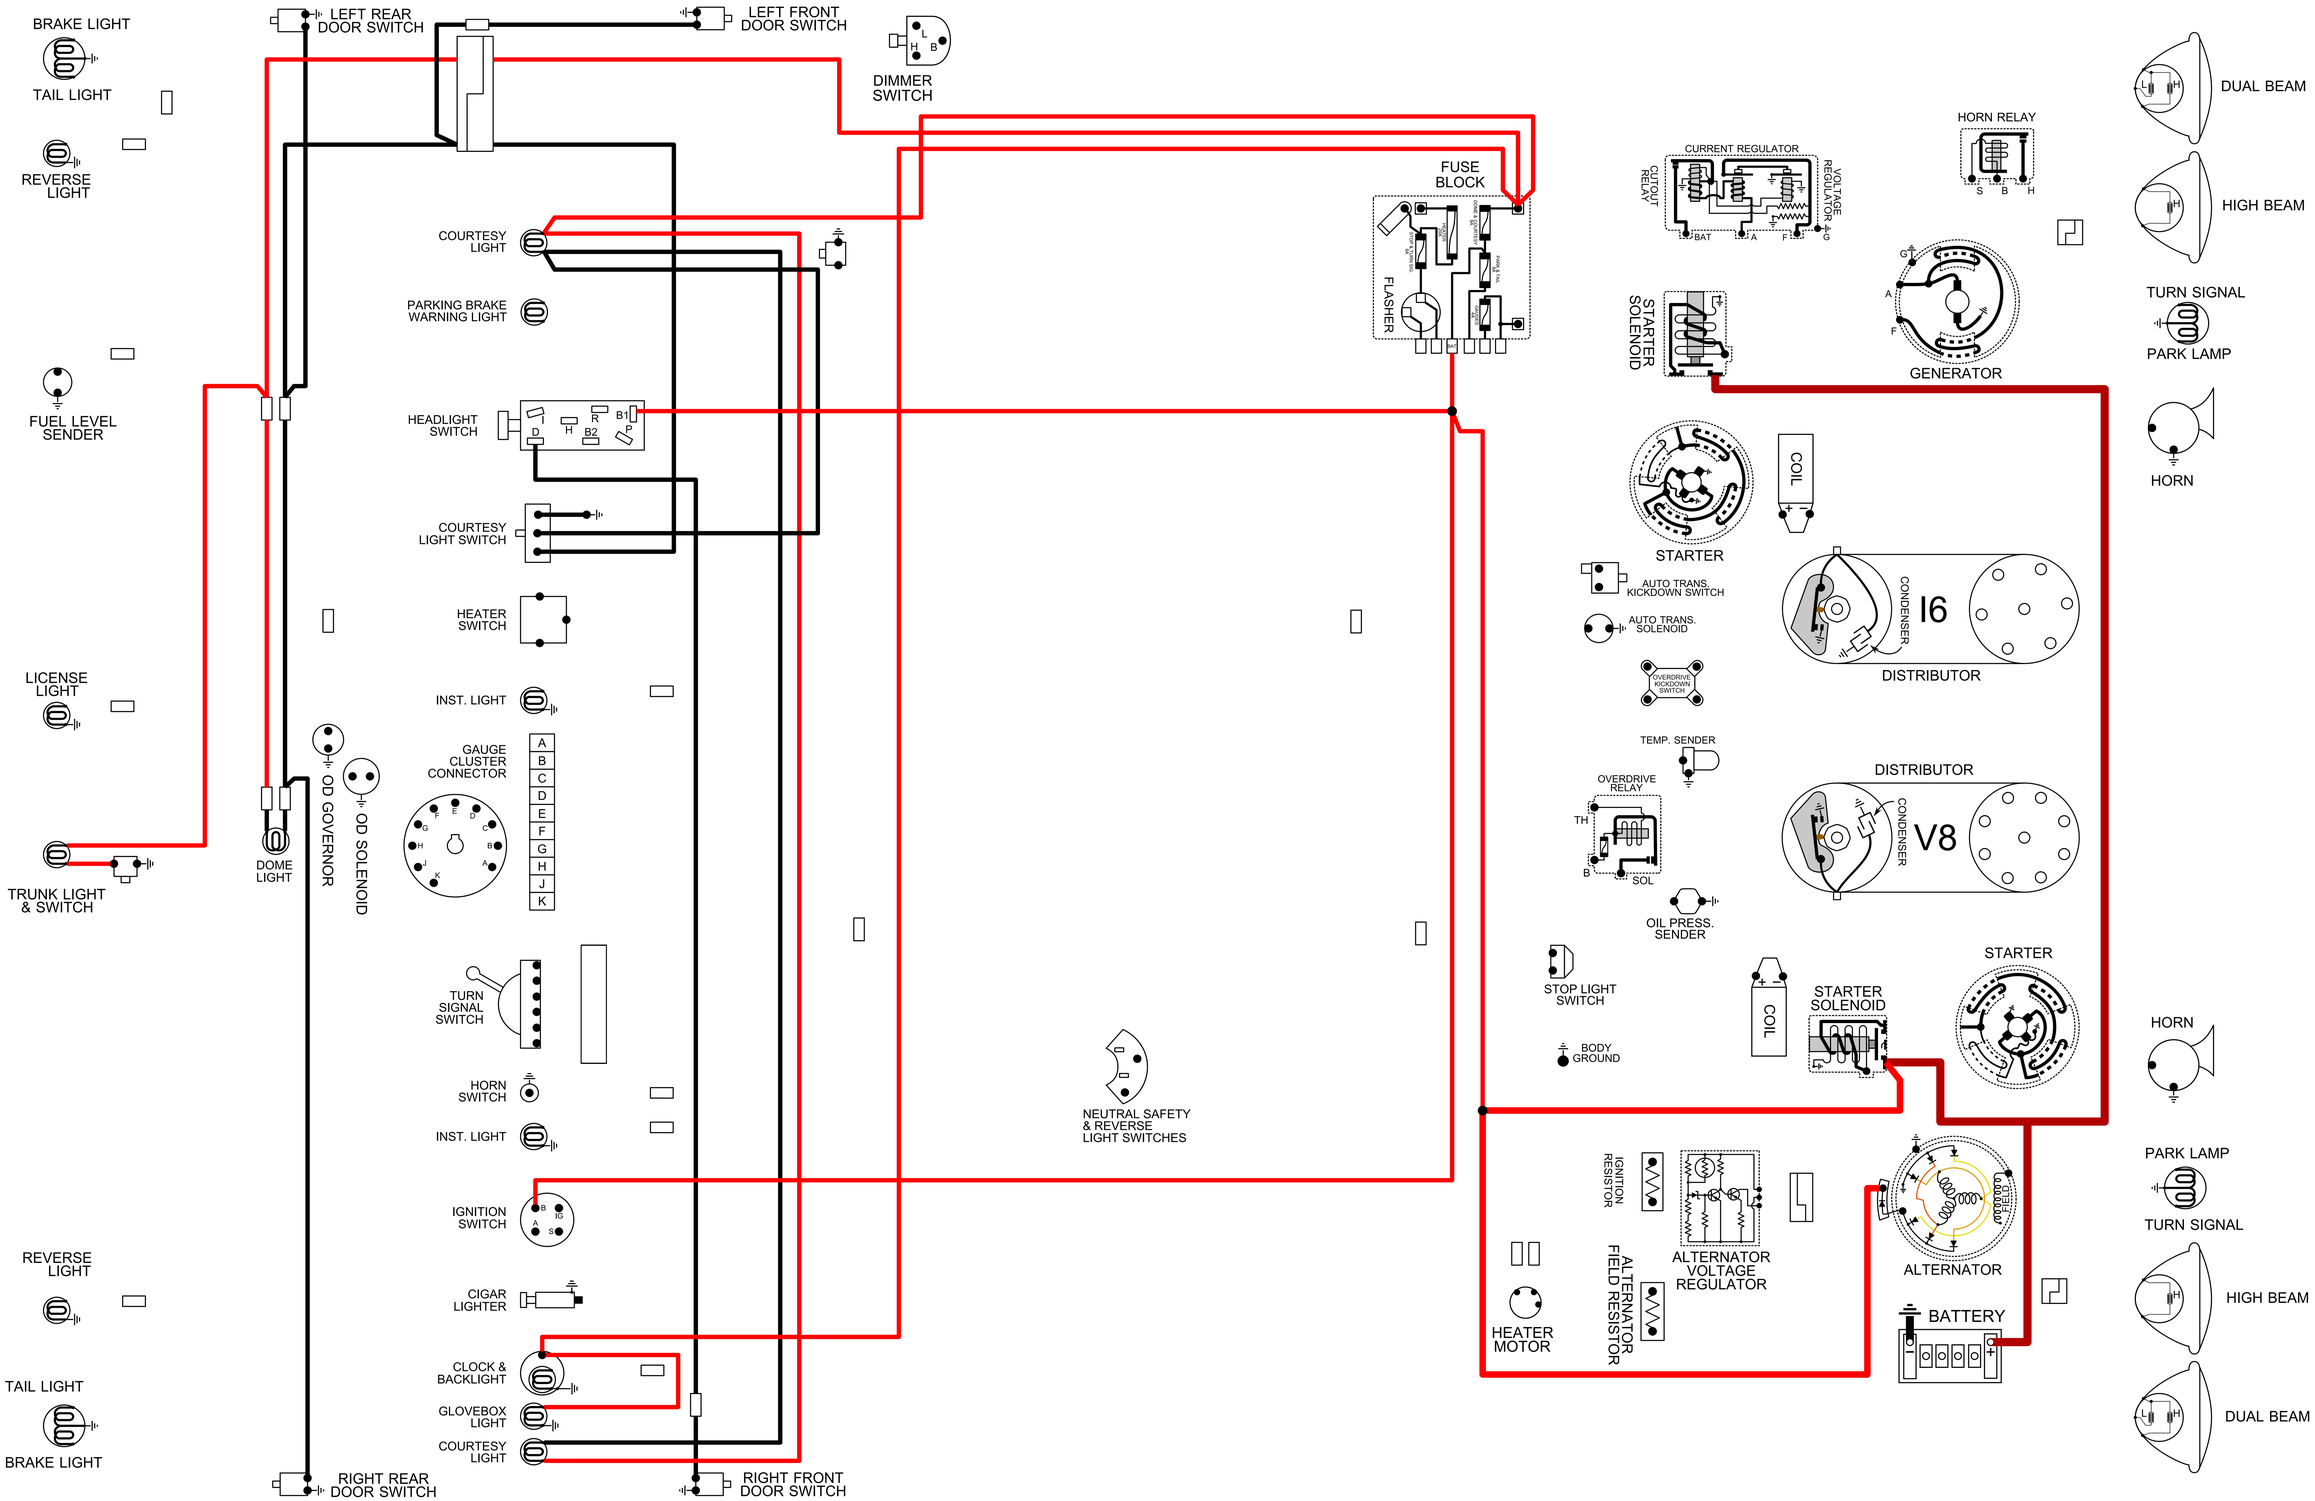

CINCO

1963 RAMBLER AMBASSADOR & CLASSIC

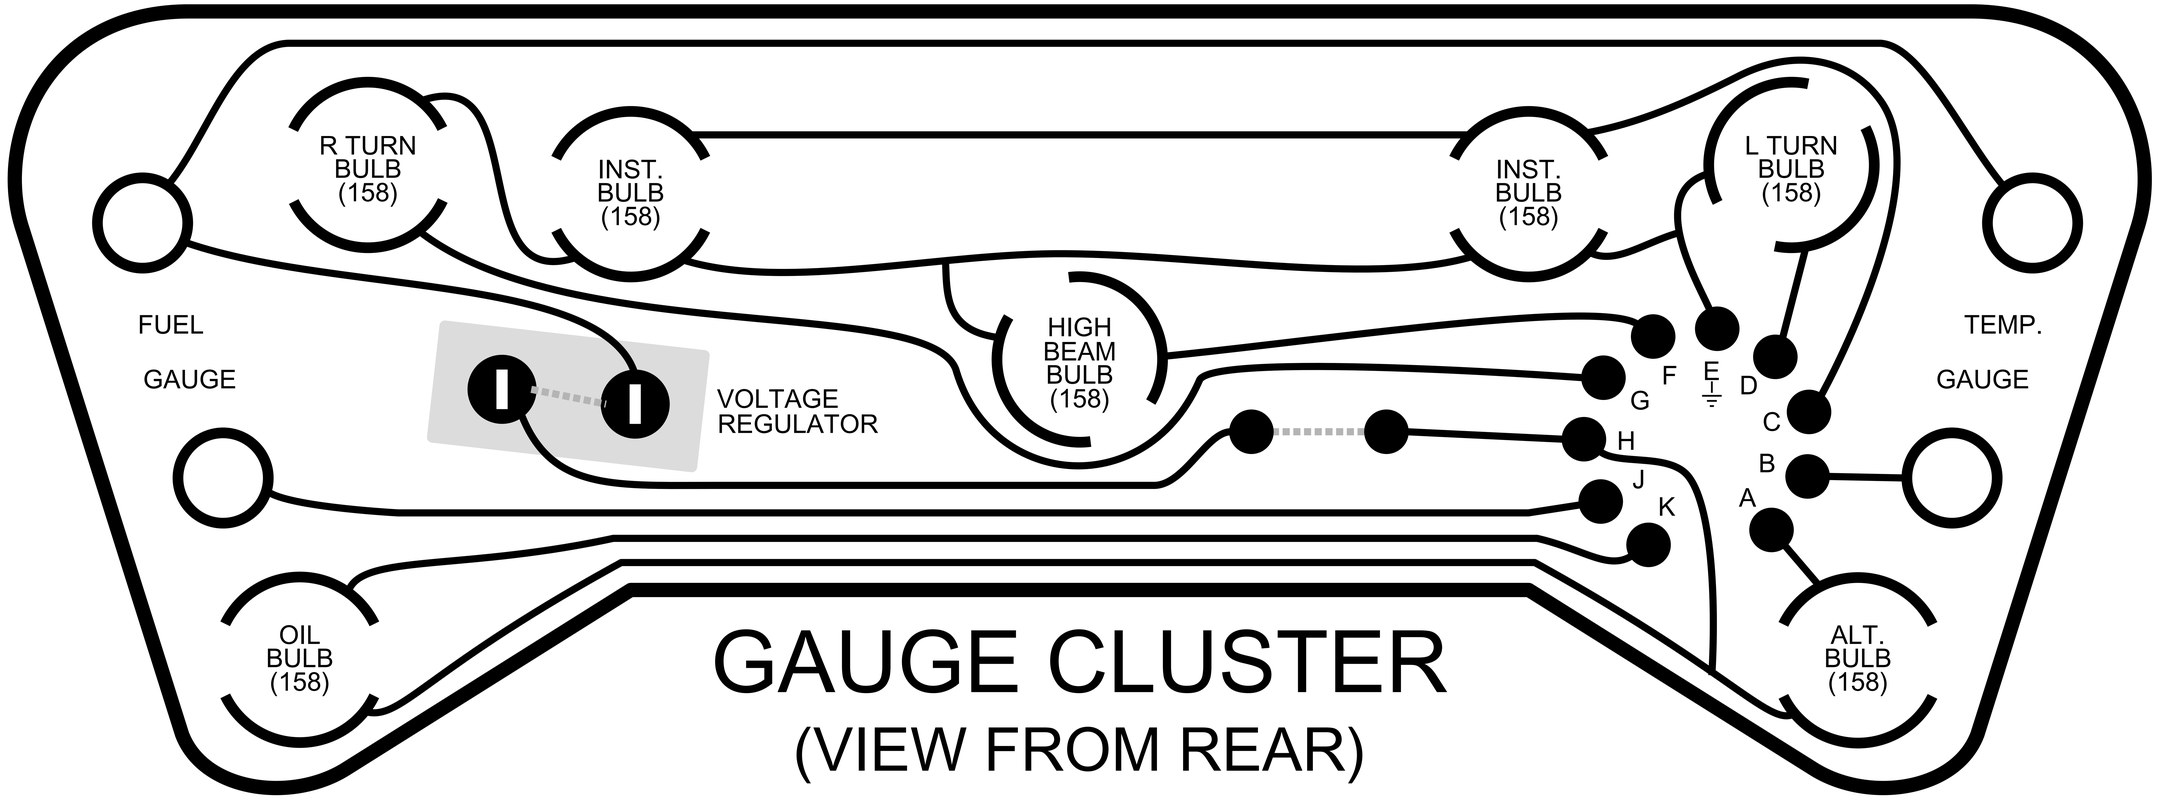

GAUGE CLUSTER
(VIEW FROM REAR)

A	TO ALTERNATOR
B	TO TEMP. SENDER
C	TO HEADLIGHT SWITCH
D	TO TURN SIG. SWITCH
E	TO GROUND
F	TO DIMMER SWITCH
G	TO TURN SIG. SWITCH
H	TO FUSEBOX
J	TO FUEL SENDER
K	TO OIL PRESS. SWITCH

CINCO